

PHONE MANUAL

HAMMER PATRIOT



Thank you for choosing HAMMER PATRIOT device. Please read the manual carefully.

HAMMER PATRIOT is intended for use on the GSM 2G frequencies 850/900/1800/1900 MHz.

It has a durable, waterproof and dust-proof casing, a contrasting, colour display, a torch, Bluetooth and support for dual SIM.

Without prior written consent of the manufacturer, no part of this manual may be photocopied, reproduced, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any systems of storing and sharing information.

Safety

Read these guidelines carefully. Not following them may be dangerous or illegal.

–DO NOT RISK–

All wireless devices may cause interferences, which could affect the performance of other devices. Do not switch on the device when the use of mobile phones is prohibited or if it might cause interference or danger.

–RESTRICTED AREAS–

Switch off your telephone in an airplane since it may disturb the operation of other equipment located therein. The telephone may interfere with operation of the medical equipment in hospitals and health protection entities. Abide by any kinds of prohibitions, regulations and warnings conveyed by the medical staff.

–ALARM CALLS–

Making alarm calls may not be possible in some areas or circumstances. It is recommended to find an alternative way to notify emergency services if you are going to undeveloped or remote areas.

–CHILDREN AND PHYSICALLY OR MENTALLY DISABLED PEOPLE–

This device should not be operated by people (including children) with limited physical or mental abilities, as well as by people with no earlier experience in operation of

electronic equipment. They may use the device only under supervision of people responsible for their safety. This device is not a toy. Memory card and SIM card are small enough to be swallowed by a child and cause choking. Keep the device and its accessories out of reach of children.

–PETROL STATIONS–

Always turn off the phone while refuelling your car on petrol station and in the proximity of chemicals.

–QUALIFIED SERVICE–

Only qualified personnel or an authorized service center may install or repair this product. Repairing by an unauthorized or unqualified service may cause device damage and warranty loss.

–ROAD SAFETY–

Do not use this device while driving any kind of vehicle.

–WATER AND OTHER LIQUIDS–

The device has resistance certificate IP68. It means that the device is dust-proof and waterproof when all of the rubber seals are intact and properly put in place, as well as when the cover is properly tightened with screws and the speakers membranes are intact (not contaminated with i.e. metal dust). We also advice not to expose the phone to water or other fluids for no good reason. Water and other fluids do not have a positive effect on phone electronic components. If wet, wipe and dry the device as soon as possible. If the following rules are not obeyed and a case of improper use is observed all the complaints concerning the device not being water- or dustproof will not be taken into consideration.

–BATTERY AND ACCESSORIES–

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). The battery should be used according to its purpose.

Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. Do not destroy,

impair or throw the battery into flames - it is dangerous and may cause fire. Worn-out or impaired battery should be placed in a dedicated container. Excessive charging the battery can cause damage. Therefore a single battery charge should not last longer than 12 hours. Installing an incorrect battery type can cause an explosion. Never open the battery. Please dispose of battery according to the instructions. Disconnect an unused charger from power grid. In case of the charger wire damage, it should not be repaired but replaced with a new one. Use the original manufacturer's accessories only.

-HEARING-



To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.

-EYESIGHT-



To avoid eyesight damage do not look closely onto the flash light during its work. A strong beam of light may cause permanent eye damage!

Manufacturer

mPTech Ltd.

Nowogrodzka 31 street

00-511 Warsaw

Poland

Website:

www.myphone.mobile.com

Designed in UE

Manufactured in China

Table of Contents

Table of Contents	4
Technical Specifications	6
1. Appearance of the phone, its functions and buttons.....	8
2. Introduction.....	11
Turning the phone on/off	11
Installation of the SIM card, memory card and battery	11

Charging the battery.....	11
Battery discharge indicator	12
3. Using the basic functions	12
Keypad lock.....	12
Phone menu access.....	12
Customize your phone.....	12
Quick switching of sound profiles	13
Sounds and user profiles	13
Call handling functions.....	14
Calling	14
Answering	14
Text messages.....	14
Message sending	14
Messages display.....	15
Phonebook.....	15
Adding a new contact.....	15
Search for a contact.....	15
Deleting contacts.....	16
4. Advanced phone features	16
Calling a contact from the phone book	16
Missed calls.....	17
Speakerphone mode	17
Speed dial.....	17
Dual SIM open.....	18
Connecting your phone to the computer	18
International calls.....	18
5. Other phone features.....	19
Time and date settings	19
Accidental change of language	19
Displays setting.....	19
Call settings.....	19
Configuration of the alarm / alarms	19
Use of calculator	20
Factory settings	20
Torch	20
Call log	20
Audio Player.....	21
Radio.....	22
Calendar	22
Bluetooth.....	23

Pairing bluetooth devices.....	24
Sending files via Bluetooth.....	24
Camera	24
Taking pictures.....	24
Recording videos.....	24
Phone icons.....	25
Troubleshooting.....	25
6. Proper phone maintenance.....	26
Proper use of the battery	26
Device maintenance	27
Safety information.....	27
Road safety.....	27
Surroundings security.....	28
Technological criteria.....	28
Information on certificates (SAR).....	28
Correct disposal of electrical and electronic equipment	29
Correct disposal of used batteries.....	30
Declaration of conformity with European Union Directives	30

Package content:

Before you start using your phone, make sure all of the following items are included in the box:

- HAMMER PATRIOT Phone,
- battery,
- charger (adapter + USB cable),
- screw loosening tool


If any of the above items is missing or damaged, please contact your dealer.

There is a sticker containing the IMEI and serial number on the packaging of HAMMER PATRIOT set.

It is recommended to keep the packaging in case of any complaint. Keep the container out of reach of children.

Technical Specifications

- Display: TFT 2.4" 240x320 px

- GSM connectivity: 2G: 850/900/1800/1900 MHz
- Battery: 1800 mAh Li-ion
- 2 MPix Camera
- Bluetooth, Dual SIM, FM Radio
- USB: microUSB
- Memory cards support up to 32 GB
- Water- and dustproof standard – IP68
- Dimensions: 130 x 66 x 19 mm/5.1 x 2.6 x 0.7 in
- Weight: 152 g/ 5.4 oz
- Input/output parameters Chargers: 100-240 V~ 0.2 A, 50/60 Hz
- Output parameters Chargers: 5.0 V  1 A

The newest version of the manual can be found on our company website:

 
 
www.myphone.pl/qr/hammer-patriot

Depending on the installed version of the software, service provider, SIM card or country, some of the descriptions in this manual may not match your phone.

Depending on the country, service provider, SIM card or device version, the phone and its accessories may differ from the illustrations included in manual.

The descriptions contained in this manual are based on the default settings of the phone.

1. Appearance of the phone, its functions and buttons

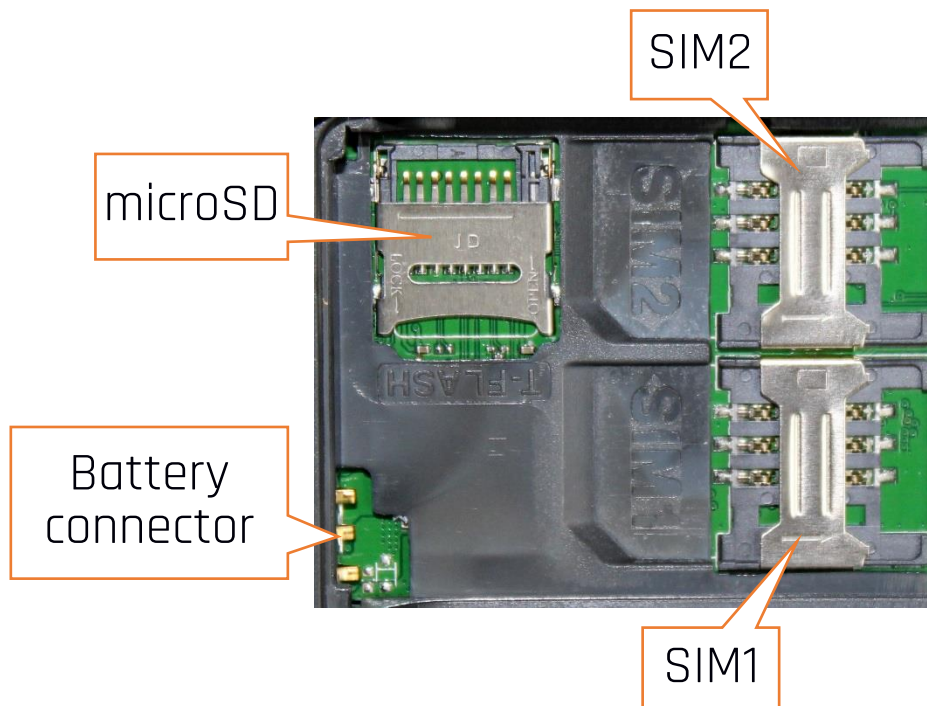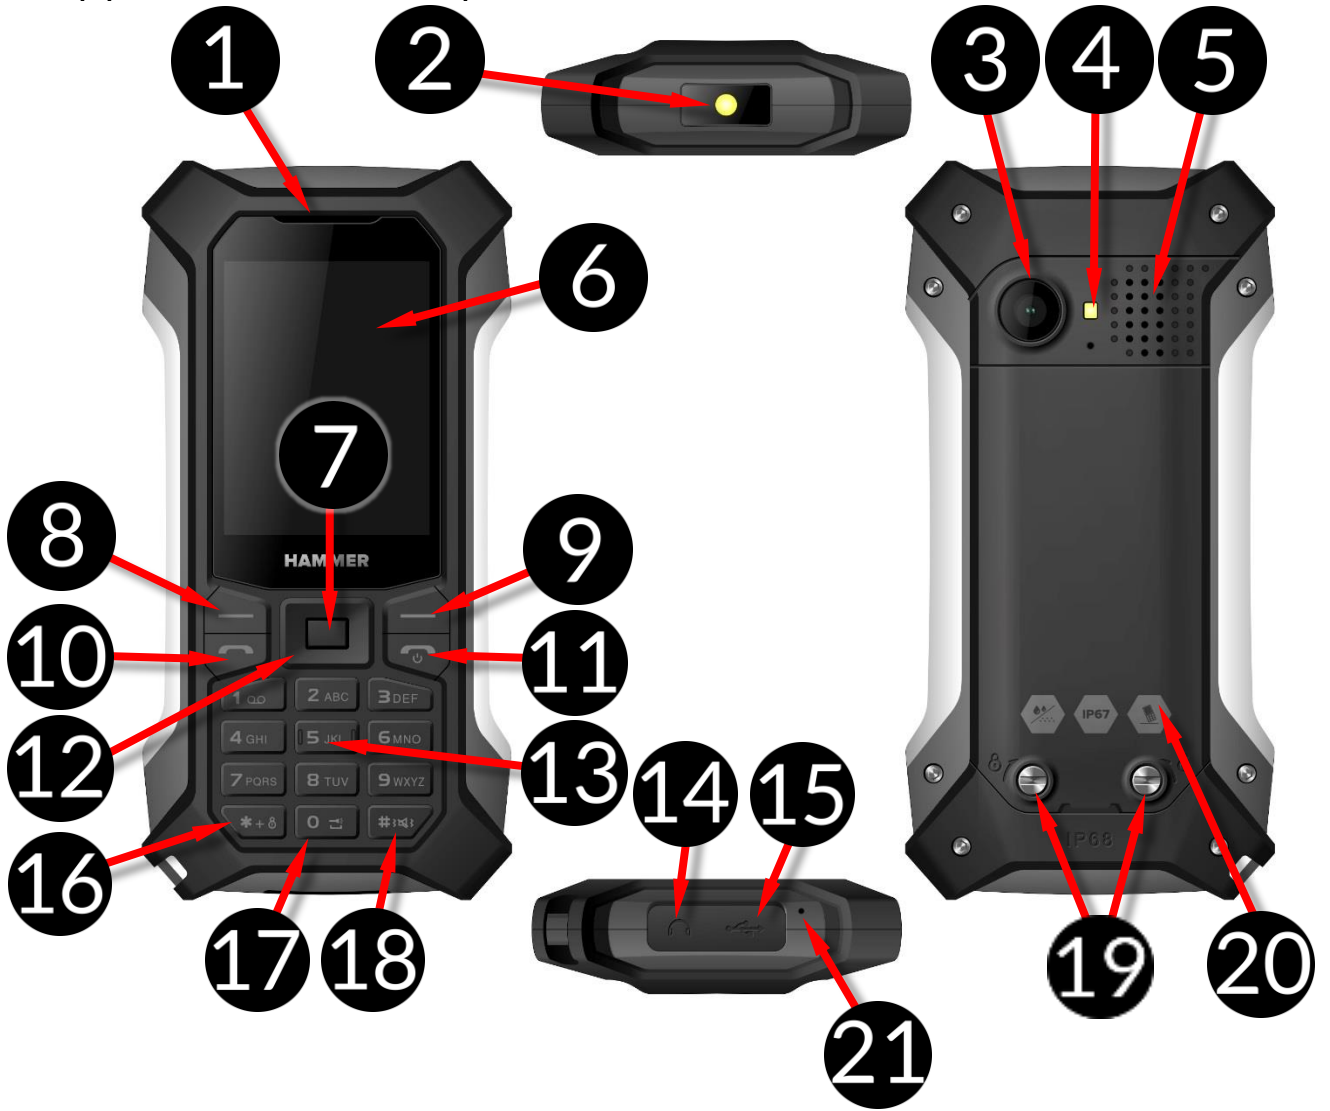

1	Speaker	A speaker used in phone conversations.
2	LED	Diode is used as a torch.
3	Camera	Camera lens
4	LED	Diode used as a flashlight for the camera.
5	External speaker	Loudspeaker for system sounds, ringtones, music.
6	Display	LCD display
7	OK button	While on the main screen enables entering the Menu, and confirms choice while in the Menu.
8	<Menu> button	While on the main screen enables entering the Menu, and confirms choice while in the Menu. Locks and unlocks the phone keypad.
9	<Contacts> button	On the Mainscreen, launch the Phonebook. While in the menu you can exit or opt out.
10	<Green handset> button	Allows you to receive an incoming call or look through the list of all calls.
11	<Red handset> button	Allows you to reject an incoming call. While in the menu allows you to return to the main screen. While on the mainscreen it allows to turn off the display or turn it off or on again.
12	Buttons <up>, <down>, <left>, <right>	While in menu enables navigating around the menu. On the home screen <up> - messages, <down> - camera, <right> - alarm clock, <left> - calendar.
13	Phone keypad	Keys enabling dialling the phone number in the home screen, and entering the letters and numbers of

		the message body in the SMS writing mode.
14	Headphone port minijack 3.5 mm	It allows you to connect headphones to your phone, so you can listen to the radio (improve the quality of reception - act as an additional antenna), music, and also make calls (when headphones are equipped with a microphone).
15	MicroUSB socket (under a rubber flap)	When connected, the charger enables recharging the battery. You can transfer data (photos, videos, music) when you connect it to your computer.
16	<*> button	Used to Use this option to decrease the volume in multimedia applications. When writing an SMS, it displays symbols for insertion into the content.
17	Torch On/Off	Pressing it for 2 seconds allows you to turn the torch on or off.
18	<#> button	Use this option to increase the volume in multimedia applications. Allows you to switch between sound modes and character input modes when writing text messages.
19	Screws	Protects the flap of the battery compartment.
20	Flap of the battery compartment	Protects the battery compartment from falling out and water entering.
21	Microphone	Do not cover it with your hand while on the phone.

2. Introduction

Turning the phone on/off

Attention: *Do not switch the phone on in places which are prohibited from using cell phones, or when it may cause interference or danger.*

To turn the phone on/off press and hold the **<Red handset>** button. If directly after turning the phone on you will see the code request, (in form of "****") type the code and press **<OK>**.

Installation of the SIM card, memory card and battery

If the phone is switched on - switch it off. Take off the back lid of the cover - unscrew the screws fixing the lid by using a flat screwdriver or the tool attached.

Insert the SIM card with its gold contacts facing down, the way in which the slot is embossed. Insert the memory card with its gold contacts facing down, the way in which the slot is embossed (look at the prior picture) The maximum supported capacity of memory card is 32 GB.

Insert the battery - the battery should be placed in such a way that the gold contacts touch the connector placed to the left from micro SD card (see the illustration above). Replace the battery cover; put it back in place - pay attention to rubber gasket - and tighten the screws.

Charging the battery

Use your fingernail to lift the rubber cap on the bottom of the phone to expose the phone connectors. Plug in the microUSB cable to microUSB connector in the phone then connect USB connector to the adapter and to low voltage grid.

 ***Attention:** *Improper connection of the charger can cause serious damage to the phone. Damages caused by an improper use of the phone are not covered by the warranty.*

While charging, a static icon of battery state located in upper right corner of the screen will become animated. When the charging is complete unplug the charger from the power outlet. Unplug the cable from the socket on the phone.

Battery discharge indicator

When the battery gets discharged, a message of the need to charge it will be displayed. Battery icon will be "empty". If the charge level is too low, the phone will turn off automatically. To use the phone one has to charge the battery.

3. Using the basic functions

Keypad lock

The keypad locks itself automatically after the time set by the user. It can also be locked manually.

To do this, press the **<Menu>** and **<*>** buttons one after the other. To unlock the keyboard (when the display is blanked) one should press any button to activate the screen then press **<unlock>** button (located at the bottom left corner of the display), followed by the **<*>** button on the keyboard. The keypad is unlocked.

Phone menu access

To access the phone menu, press the **<OK>** key while on the phone desktop. By pressing navigation buttons **<up>**, **<down>**, **<left>** or **<right>**, move to the chosen menu icon. Press **<OK>** button to confirm your choice (and enter the menu item) or **<Back>** to return to previous menu/desktop.

Customize your phone

HAMMER PATRIOT phone can be customized to your needs. This makes its use more enjoyable and easier.

Quick switching of sound profiles

To turn off sounds use <#> button. Press it and hold for about 3 seconds, until „Silent mode activated“ announcement is displayed. Press and hold again to return to the previous user-defined mode.

Sounds and user profiles

To set ringtones and volume in the phone use [Profiles] option. To launch it press <OK> button and enter the phone menu. Subsequently, with use of navigation buttons choose an option [Settings] > [Profiles] and press <OK>. In the list, choose the desired sound profile and select [Options] > [Activate] > <Select> to activate the selected profile, or [Options] > [Customize] > <Select> to edit the profile according to your preferences.

Available sound profile options:

- [Alert type] - enter [Options] > [Change] > <Select> and select the chosen alert type.
- [Ringtone] - allows to change the ringtone sound of an incoming call. Go to [Options] > [Change] > <Select>, select a melody and confirm with <OK>.
- [Ringtone volume] - select [Options] > [Change] > <Select> and adjust the volume using the <left>, <right>, <up>, <down> buttons and confirm with <OK>.
- [Message] - change the sound of an incoming message. Select [Options] > [Change] > <Select>, select the desired sound and confirm with <OK>.
- [Message volume] - select [Options] > [Change] > <Select> and adjust the volume using the <left>, <right>, <up>, <down> buttons and confirm with <OK>.
- [Keypad] - select [Options] > [Change] > <Select> and select the type of button sound (Silent, Click, Tone, Human voice) with the <OK> buttons.

- [Keytone volume] - adjust the volume using the <Left>, <Right>, <Up> or <Down> buttons and confirm with the <OK> button.
- [System alert] - button allows you to switch the system alert sound on or off.

Call handling functions

Calling

Enter the number using the keypad on the home screen.



We recommend that you enter the area code prior to the telephone number.

Press <green handset> button to start the call.

Press <red handset> button to finish the call.

Answering

To answer a call press <green handset>.

Press <red handset> to finish/ reject the call.

Text messages

Message sending

Enter: [Menu] > [Messages] > [Write message]. Select type of message SMS or MMS. Type in the message using the keypad. Signs are typed in letter by letter.

<#> button is used to change the input method. to, among others:

- Abc - The first letter capital, the rest lower case.
- abc - Only lower case letters,
- ABC - Only uppercase letters,
- Numeric - numbers only

To enter a special character i.e. period, comma, dash, etc., press <*> and choose from the list, or press the <1> a number of times (in a mode other than "123"). To enter a space between the words press <0> button. To enter the

letter "b" one should press <2> button twice. To enter the letter "d" one should press <3> button once etc.

For MMS messages, you can also add a picture, sound or video clip.

To send a message press **[Options]** button and select **[Send to]**. A selection list will appear:

- **[Enter recipient]** - Enter the number using the numeric keypad and press <OK>.
- **[Add from Phonebook]** - after selecting this option, just enter the first letters of the contact's name to search for it in the contact list and select the contacts by pressing <OK>. Select <OK> to confirm the choice.

After entering the number/choosing a contact enter: **[Options]** > **[Send]**, to send the message.

Messages display

Enter: **[Menu]** > **[Messages]** > **[Inbox]**, choose a message from the list and press <OK> or **[Options]** > **[View]** > <Select> to see the message itself.

Phonebook

Adding a new contact

To add a contact, open your phone's main desktop and press the button marked with the contacts icon (in the lower right corner of the screen), then select **[Add new contact]** by pressing the <OK> button and select a location for the contact **[To SIM1]**, **[To SIM2]** or **[To phone]** by confirming with the <OK> button. Enter the contact details - name and number. When you have typed-in the number/name press <OK> or **[Save]** to save the contact.

Search for a contact

To search contact choose: **[Menu]** > **[Phonebook]**. Enter the first letter of the contact. A full list of contacts starting with

given letter will appear on screen. To narrow down the list, enter additional letters.

To search for another contact use navigation buttons **<up>** or **<down>**.

After searching the contact and choosing **[Options]** a list of operations will appear:

- **[View]** - to see the details of the contact (name and number).
- **[Send SMS]** - to send text messages.
- **[Send MMS]** - to send multimedia message.
- **[Call]** - to call a number from contact.
- **[Edit]** - to edit the contact.
- **[Delete]** - to delete a contact.
- **[Copy]** - to copy a contact between the phone, SIM cards or to file.
- **[Add to blacklist]** - to add to a list of blocked numbers.
- **[Phonebook settings]** - to enter the menu of additional options such as default memory, memory status, copy, move and delete contacts.

Deleting contacts

To delete all contacts enter: **[Menu] > [Phonebook] > [Options] > [Phonebook settings] > [Delete all contacts] > [Ok]**. Select whether to use contacts from SIM1, SIM2 or phone.

To delete a single contact, select: **[Menu] > [Contacts] >** search for a contact you wish to delete **> [Options] > [Delete] > <Yes>**.

4. Advanced phone features

Calling a contact from the Phonebook

To call a number stored in the **[Phonebook]** submenu, search for and select the appropriate contact (using the keypad to enter the name of the contact).

Make a call by pressing the **<green handset>** button on the phone keypad and select the SIM card through which you want to make a call.

Missed calls

Missed calls are displayed on the screen of the phone. An appropriate message and an icon on the top of the screen will inform you about a missed call. Additionally, if the screen is off, the keyboard backlight will flash from time to time, to remind about a missed call. To check who called, press **[View]**. Another solution is to enter **[Menu] > [Call history] > [Missed calls] > <OK>**. To call back, select an unanswered call from the list, then press the **<green handset>** key on the phone keyboard and select the SIM card through which you want to make a call.

Speakerphone mode

During a call press **[H-free]**, to activate speakerphone mode.

Speed dial

This function works only with at least one SIM card inserted.

Select **[Menu] > [Settings] > [Speed dial]**. A list of options will appear: **[Status]**, to check the state of service **[Set numbers]**, to program speed dialling numbers. Choose option **[Status]**, and press **<OK>** and set **[Status]** to: **[On]**. Choose an option **[Set numbers]**. On the left side of the screen there are digits which correspond with keypad buttons. Using edit options: **[Edit] >** choose an entry from the contact list which can be assigned to one of the numeric buttons (2 to 9). When you set the numbers press **<red handset>** to return to the main phone screen. To establish connection by speed dialling function press and hold for about 2 seconds the programmed button of phone numerical keyboard.

Dual SIM open

Dual SIM function enables using 2 SIM cards simultaneously. To use that function one should mount two SIM cards in the phone (SIM slots are placed beneath the phone battery). Subsequently enter **[Menu] > [Settings] > [Call settings] > [SIM 1 call settings] or [SIM 2 call settings]**. You have the following options to choose from:

- **[Caller ID]** - to manage the display of the user number.
- **[Call waiting]** - to manage the call waiting.
- **[Call forwarding]** - to manage call forwarding.
- **[Caller barring]** - to manage locked callers.
- **[Line switching]** - to manage the numbers assigned to one SIM card (the card must support this option).

If there are two active SIM cards in your phone, the phone will ask you every time which SIM card you want to use to send a message or make a call.

Connecting your phone to the computer

HAMMER PATRIOT can be plugged to the PC computer using USB cable. This allows you to view and exchange data between your computer and your phone. To do this, connect the microUSB plug to the phone connector (located on the bottom of the phone), then connect the USB plug to the USB connector of the computer. The screen of the phone should show information about connecting the USB charger. Select **[USB]** from the list of possible USB port configurations displayed. The phone is now connected to the computer. The contents of the phone memory can be viewed using Windows Explorer.

International calls

In standby mode, press the **<*>** button twice until the **"+"** sign appears. Enter the full phone number of the recipient (the country code and the telephone number), and then press **<green handset>** to make a call.

5. Other phone features

Time and date settings

To set the time and date, select [Menu] > [Settings] > [Phone settings] > [Time and date]. Select [Set time/date] confirm with <OK> button and type in the current time using the keypad. You can also enable or disable the daylight saving here. Press <down> button to type in the current date, confirm with <OK> button or by choosing [Save]. Set the date display format in [Phone settings] > [Time and date] > [Set format].

Accidental change of language

To set the language of the user, if someone accidentally chooses an unknown language, press the [Menu] > up > up > OK > down > OK > down > down > OK and then select the desired menu language.

Displays setting

Menu] > [Settings] > [Phone settings] > [Display]:

- [Wallpapers] > [System] if you want to choose from system wallpapers or [User defined] if you want to add your own wallpaper from microSD memory card or phone memory and choose any picture from the list. To see a preview of given picture select <OK>. To select the chosen picture as a wallpaper press: [View] > [OK].
- [LCD backlight] - allows to set the brightness and length of backlight of the phone screen.

Call settings

Menu] > [Settings] > [Call settings] > [Advanced settings]. Options such as black list, automatic redial (when busy), the ability to turn on the call duration reminder, the settings of the method of answering calls.

Configuration of the alarm/alarms

Select [Menu] > [Organizer] > [Alarm] > <OK> or select <Right> while on the main desktop. Choose any alarm and

press **[Edit]** button. You can turn the alarm on or off. To move downwards, press **<down>**, where you can set the alarm time using the phone numerical keypad. Next options allows you to set the length of the nap, and how the alarm should sound: once, everyday, or custom. Below is **[Alarm tone]**, where you can define a ringtone and **[Alert type]**, where you can select a combination of ringtone and vibration. To confirm alarm setting press **[Save]**.

Use of calculator


[Menu] > [Organizer] > [Calculator] > <OK>. Basic arithmetic operations can be performed using the numeric keypad (typing numbers, digits). Actions can be set using navigation buttons: **<Up>** - addition, **<Down>** - subtraction, **<Left>** - multiplication and **<Right>** - division. To see the result press **<OK>**.

Factory settings

To get back to factory settings enter **[Menu] > [Settings] > [Restore factory settings]**, input the phone password and confirm by pressing **<OK>**. Password required to restore the factory settings is **1122**.

Torch

To turn on the torch, press and hold for approx. 3 seconds the **<0>** (zero) **(17)** button. You can also switch the flashlight on and off by going to **[Menu] > [Organizer] > [Torch]**.

 *Attention: The light emitted by the LED has a strong focus therefore it is unadvisable to look directly into the light. Not following this instruction may cause damage to your eyesight.*

Call log

[Menu] > [Call History]. You can look through the call log - what calls were missed, received etc. The following positions are placed in submenu:

- Missed calls
- Dialed calls
- Received calls
- All calls
- Delete call history.

Audio Player

Audio player is located in: **[Menu] > [Multimedia] > [Audio player]**. This application allows you to play music files in MP3, AAC, AMR, WAV formats.

In order to play music files, they should be stored on a microSD memory card and they will be automatically added to the player's playlist. If not added select: **[List] > [Options] > [Refresh list]**.

Attention: Listening to the audio player too long or too loud can cause hearing damage.

To enjoy the audio player use the following buttons:

Button	Function
<#>	Louder
<*>	Quieter
<Right>	Next track

<Left>	Previous track
<OK>	Play/Pause
<up>	Repeat
<down>	Order

When the audio player is on, in the bottom left corner an option **[List]** is available. Use it to show all available tracks. More audio player options can be found in **[List] > [Options] > [Settings]**. Available options:

- **[Pre.playlist]** - you can choose the source of music - memory card or phone memory.
- **[List auto gen.]** - you can set wether the list will generate automatically or will it be managed by the user.
- **[Repeat]** - Repeat song playback.
- **[Shuffle]** - Shuffle playback of songs on or off.
- **[Background play]** - playing songs in the background - you can do other things on your phone and the music will still be heard.

Radio

 *Note: Listening to the FM radio does not require headphones.*

Enter **[Menu] > [Multimedia] > [FM Radio]**. Select **[Options] > [Auto Search] > <Select>**, and then confirm your selection to search and save the available radio stations. All found radio stations will be saved and available at **[Options] > [Channel list]**.

Radio control is done using the following buttons:

Button	Function
<#>	Louder
<*>	Quieter
<down>	0.1 MHz down.
<up>	0.1 MHz up.
<OK>	To turn the radio on/off
<Right>	To switch to the next channel
<Left>	To switch to the previous channel

Calendar

To start the calendar application, select **[Menu] > [Organizer] > [Calendar]** or by selecting the **<Left>** button on the main desktop. You can add events to the calendar, to which you can set reminders. Use the **<down>**, **<up>**, **<left>**, **<right>** buttons to navigate between calendar dates. On the selected date, press **<Options>** and select **[Add Event] > <Select>**. A screen where you can enter the following will appear:

- **[Subject]** - name of the event.
- **[Start]** - date and time of the beginning of an event.
- **[End]** - date and time of the ending of the event.
- **[Type]** - type of meeting (reminder, meeting, course, date, call, anniversary, birthday).

- **[Alarm]** - how long in advance you want to trigger the reminder,
- **[Repeat]** - how often the reminder should be triggered (once, every day, custom, weekly, monthly, yearly).
- **[Location]** - where will the event take place.
- **[Details]** - detailed description of the event.

The reminder will appear on the screen on the set date and time of the event. To confirm alarm setting enter: **[Options]** > **[Save]**.

Bluetooth

The phone is equipped with a Bluetooth. It is used to wirelessly connect and exchange files with other devices equipped with Bluetooth. To use Bluetooth enter: **[Menu]** > **[Settings]** > **[Connectivity]** > **[Bluetooth]**. The following options are available:

- **[Power]** - press <On> or <Off> to turn the Bluetooth module on or off. It is signalled with a Bluetooth icon displayed on the upper status bar on the phone main screen.
- **[Visibility]** - Enabling this feature allows the visibility of your phone on the list of available devices other phones, tablets and computers equipped with Bluetooth.
- **[My device]** - an option **[Search new device]** is situated here which allows you to display a list of available Bluetooth devices in range. This feature allows you to connect to a device from the list.
- **[Search audio device]** - searches for audio devices (headphones, loudspeakers, speakerphones).
- **[My name]** - the name visible to other bluetooth devices can be typed in here. Default name is Hammer_Patriot.
- **[Advanced]** - You can select **[Audio path]** - whether you want to send audio via Bluetooth or via the phone,

[Storage] - where you want to save files sent via Bluetooth, [My address] - phone address with Bluetooth connection.

Pairing bluetooth devices

To connect to a Bluetooth device, select [Menu] > [Settings] > [Connectivity] > [Bluetooth] > [My Device] > [Search new device], then select a device from the list and confirm pairing with [Pair]. You will be prompted to enter the same combination of digits on both devices and confirm pairing.

Sending files via Bluetooth

To send a file from the memory card to a paired (connected) device, select [Menu] > [Multimedia] > [File manager] > [Memory card] > select the file to send and then select [Options] > [Send] > [Bluetooth], and search for the recipient's device or add it from the list of paired devices. The file will be sent after acceptance by the recipient.

Camera

HAMMER PATRIOT is equipped with a camera with the possibility of taking pictures and recording videos.

Taking pictures






To take a picture, open the camera application by entering: [Menu] > [Multimedia] > [Camcorder] or by selecting the <Down> button on the main desktop. When you start the camera, place the subject you wish to photograph in the frame, and then press <OK> to take a photo. Photos will be saved automatically in the phone memory or a microSD card in the "Photos" file. You can view the pictures by entering [Menu] > [Multimedia] > [Pictures].


Recording videos

To record a video enter [Menu] > [Multimedia] > [Camcorder] or press <down> button while on the home screen. When the

application screen appears, use the **<Down>** button to activate video recording mode - the photocamera icon will change to the camera icon. Then place the recorded object in the camera frame and press the **<OK>** button to start recording. Videos are saved default in a "Videos" file on the microSD memory card. You can watch movies using **[Menu] > [Multimedia] > [Video Player]**.

Phone icons

	GSM network range
	Bluetooth ON
	"General" mode on
	Keypad locked
	"Silent" mode activated

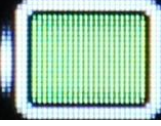 	Missed call
	Battery charge level
	Unread SMS/MMS message
	USB connection
	Plugged-in earphones

Troubleshooting

Problem / message	Possible solution
Network fail	In areas where signal or reception is weak, calls may not be possible. Also receiving calls may not be possible. Move to another location and try again.
Insert SIM card	Make sure SIM card has been correctly installed.
The connection cannot be established	Check if the typed-in phone number is correct. Check if the phone number entered to the [Phonebook] is correct. Enter the correct phone number if necessary.

Input PIN	If the SIM card is secured with the PIN code you have to enter the PIN when turning the phone on and press <OK>.
Poor sound quality while on the phone	Make sure that the speaker and mic. are not covered.
I cannot hear the caller./ The caller cannot hear me	The mic. should be close to mouth. Check if the built-in mic. is not covered. When a headset is un use, check if it has been connected correctly. Check if the built-in speaker isn't covered.
No one can call me	The phone has to be on and within GSM network reach.

6. Proper phone maintenance.

Proper use of the battery

Battery in this device can be charged with a charger. If the battery level is low, recharge it. To prolong battery life, let it discharge before connecting the charger. If not used, unplug the charger from the phone. Excessive charging causes shortened battery life. The temperature of the battery has an impact on its charging cycle. Prior to the charging process, cool the battery or raise its temperature so that it is similar to the room temperature (approx. 20°C/68°F).

If the battery temperature exceeds 40°C/104°F the battery must not be charged! Use the battery only according to its intended purpose. Avoid leaving the battery within a magnetic field range, because it shortens its life. Do not use a damaged battery. The battery lifespan can be shortened, if it has been exposed to very low or very high temperatures - this causes interference to the phone, even when the battery has been properly charged. Do not throw the battery into flames! Do not throw a worn-out battery - send it or return it to an authorized recycling point.

Device maintenance

To extend the life of your phone, follow the guidelines. Keep the phone and its accessories out of reach of children. Avoid exposing the phone to the high and low temperatures for it can shorten lifespan of phone electronic components, melt the plastic parts and destroy the battery. Do not try to disassemble the phone. Tampering with its structure in an unprofessional manner may cause serious damage to the phone or destroy it completely. For cleaning use only a dry cloth. Never use any agent with a high concentration of acids or alkalis. Use only original accessories; violation of this rule may result in invalidation of the warranty. Exposing the phone to extreme temperatures can reduce the level of protection. It is recommended that the phone is not used at temperatures below 0°C/32°F or higher than 40°C/104°F.



The packaging of the device can be recycled in accordance with local regulations.

Safety information

While using the phone, take into account the legal regulations concerning safety and the safety of its surroundings.

Road safety

Apart from emergency situations, using the phone while driving should be carried out only with use of a headset or a speaker phone, which ensures safety and does not limit motor abilities of the user. If one does not own a headset and still wants to use the phone, one should pull over and stop the car. Pay attention to the legal regulations concerning the use of mobile phone while driving. Some electronic components of the car without adequate protection can be affected by waves emitted by the phone; it is therefore advisable to use the phone in the car only when the external antenna of the vehicle is secured. Use the

services of a professional when installing the phone in the car.

Surroundings security

Familiarise yourself with legal regulations concerning the use of mobile phones. Turn off the phone in areas where its use is forbidden or when it may cause interference or danger. The use of any devices that radio waves causes interference with medical devices (i.e. cardiac pacemaker), if they are not properly secured (if in doubt, consult your doctor or medical device manufacturer).

Attention: *In places where there is a risk of explosion (i.e. petrol stations, chemical factories etc.), it is advisable to turn off the phone. Please refer to regulations governing the use of GSM equipment in these places.*

Technological criteria

Network: GSM 2G: 850/900/1800/1900 MHz

Some services may depend on your provider, the state of your local cellular network, version of the SIM card used and the way you use your phone. For more information, please contact your service provider.

 
Attention
The manufacturer is not responsible for any consequences caused by improper usage of the phone and not obeying the above instructions.
Statement
The software version can be upgraded without earlier notice. The representative retains the right to determine the correct interpretation of the above instructions.

Information on certificates (SAR)

Your mobile phone is a transmitter and receiver of radio waves. It is designed and manufactured according to current safety standards, so that exposure to radio waves never

exceeds the limits set by the Council of European Union. Those limits establish the permitted levels of RF energy for the general population and were developed by independent scientific organizations on the basis of detailed scientific studies, including a large safety margin. Their purpose is to ensure the safety of all people, regardless of age and health. With regard to cell phones the level of exposure to radio waves is measured by the value SAR (Specific Absorption Rate). The SAR limit recommended by the Council of the European Union is 2 W/kg and refers to the averaged value for 10 grams of tissue. The highest SAR value for the phone HAMMER Patriot equals **0.684 W/kg**.

Correct disposal of electrical and electronic equipment

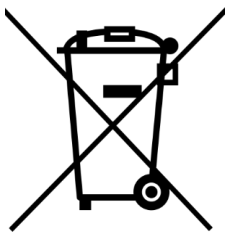

The device is marked with a crossed-out garbage bin, in accordance with the European Directive 2012/19/EU on used electrical and electronic Equipment (Waste Electrical and Electronic equipment - WEEE). Products marked with this symbol should not be disposed of or dumped with other household waste after a period of use. The user is obliged to get rid of used electrical and electronic equipment by delivering it to designated recycling point in which dangerous waste are being recycled. Collecting this type of waste in designated locations, and the actual process of their recovery contribute to the protection of natural resources. Proper disposal of used electrical and electronic equipment is beneficial to human health and environment. To obtain information on where and how to dispose of used electrical and electronic equipment in an environmentally friendly manner user should contact their local government office, the waste collection point, or point of sale, where the equipment was purchased.

Correct disposal of used batteries



According to the EU directive 2006/66/EC with changes contained in EU directive 2013/56/UE on the disposal of batteries, this product is marked with crossed-out garbage bin symbol. The symbol indicates that the batteries used in this product should not be disposed with regular household waste, but treated according to the legal directives and local regulations. It is not allowed to dispose of batteries and accumulators with unsorted municipal waste. Users of batteries and accumulators must use the available collection points of these items, which allows them to return, recycle and disposal. Within the EU, the collection and recycling of batteries and accumulators is a subject to separate procedures. To learn more about existing procedures of recycling of batteries and accumulators please contact your local office or an institution for waste disposal or landfill.

Declaration of conformity with European Union Directives



mPTech Ltd. hereby declares that HAMMER PATRIOT cellular phone is compliant with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the

following Internet address:

<https://www.myphone.pl/qr/hammer-patriot>