

OPERATING INSTRUCTIONS

myPhone 6310



Lot number: 201610

Thank you for choosing the device my-Phone 6310. Please read the Manual carefully.

SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal.

DO NOT RISK

Do not switch on the phone when the use of mobile phones is prohibited or if it might cause interference or danger.

ROAD SAFETY

Do not use the mobile phone while driving a car.

INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.

RESTRICTED AREAS

Switch OFF your telephone in a plane since it may disturb the operation of other equipment located therein. The

telephone may interfere with operation of the medical equipment in hospitals and health protection entities. Abide by any kinds of bans, regulations and warnings transferred by the medical staff.

QUALIFIED SERVICE

Only qualified personnel may install or repair this product. Repairing by an unauthorized service may cause a phone damage and warranty loss.

BATTERY AND ACCESSORIES

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. The battery should be used according to its purpose. Disconnect unused charger from mains supply. Excessive charging the battery can cause damage. Therefore, a single battery charge should not last

longer than three days. In case of a damage the charger should not be repaired but replaced with a new one. Use only original myPhone accessories available with your phone. Installing an incorrect battery type can cause explosion. Please dispose of battery according to the instructions.

ALARM CALLS

Making alarm calls may not be possible in some areas or circumstances. It is recommended to find an alternative way to notify emergency services if you are going to undeveloped or remote areas.

WATERPROOF

This device is not waterproof. Protect it from moisture.

CHILDREN

The phone is not a toy. Keep the device and its accessories out of reach of children.

USING THIS MANUAL

Before you use the device refer to information about safety precautions and instructions for using the phone. The descriptions in this manual are based on the default settings of the phone. The latest version of the user manual can be found on a website: www.myphone.pl.

Depending on the installed version of the software, service providers, SIM card or country, some of the descriptions in this manual may not match your phone.

PETROL STATION SAFETY

Always turn off the phone while refueling your car on petrol station. Do not use your phone close to chemicals.

SOUNDS



To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.

SIGHT



To avoid any damage to your sight, do not look closely at an activated flash light. A powerful ray of light may lead to a permanent damage to your eyes.

Manufactured by:

myPhone Sp. z o.o.
ul. Nowogrodzka 31
00-511 Warszawa
Polska

Customer service:

myPhone Sp. z o.o.
ul. Krakowska 119
50-428 Wrocław
Polska

phone: (+48 71) 71 77 400

E-mail: pomoc@myphone.pl

website: www.myphone.pl

myPhone 6310 contents

Before you start using your phone, make sure all of the following items are included in the box:

- myPhone 6310,
- Li-Ion 900 mAh battery,
- mains charger,
- user manual.

If any of the above items is missing or damaged, please contact your dealer.

There is a sticker containing the IMEI and serial number on the packaging of myPhone 6310 set.

Therefore it is recommended to keep the packaging in case of any complaint. Keep the container out of reach of children.

myPhone 6310 overview



Nr	Description	Function
1	Display	LCD screen
2	Earphone	Phone calls' speaker
3	LED flash-light	May be turned on by pressing [Menu] → [Organizer] → [Torch] → <OK>
4	Speaker	Rear loudspeaker for speakerphone mode or music playback etc.
5	Camera	The camera lens.
6	Left functional key/Menu	Standby: enter the menu. In the menu: Press to confirm the function indicated on the display on the bottom left corner of the screen above the key. Standby: the combination of

		pressing the left functional key and then immediately pressing the * to lock / unlock the keyboard.
7	Right functional key	Standby: enter the Contacts In the menu: Press to confirm the function indicated on the display in the bottom right corner of the screen above the key.
8	Green handset key	Press to answer an incoming call. Standby: Press to access the call list.
9	Red handset key	Phone turned off: press and hold to turn the phone on. Phone turned on: press and hold to turn the phone off.

		<p>In the menu: Press to return to the Home screen.</p> <p>Standby: Press to lock the phone.</p>
10	Navigation keys: Up, Down, Left, Right and Ok	<p>Used to navigate through various menus and used to insert actions in the calculator app: <Up> - add, <Down> - subtract, <Left> - multiply, <Right> - divide.</p> <p>Standby: <Up> - Music Player, <Down> - Camera, <Left> - New Sms, <Right> - User Profiles.</p>
11	Keyboard	Alphanumeric keypad
12	Button */lock key	The combination of pressing the left functional key and then immediately pressing the

		* to lock / unlock the keyboard.
13	Button #	Long press to activate/deactivate Silent, Meeting or General mode.
14	Open the case place	Place to delicately open the phone to insert battery, SIM card etc.
15	Microphone	Make sure that the microphone is not obstructed or covered by anything during the call.
16	Audio connector	Mini jack 3,5mm connector for headphones and hands free.
17	Micro USB connector	Used to charge and to connect the data cable.

Specifications

Parameters	Description
Network	GSM 900/1800MHz
Dimensions and weight	122,5×50,5×14,8 mm, 87 g
LCD	2,4"
Battery	900mAh, Li-Ion
Memory card	Up to 16GB microSD
Camera	VGA
Additional functions	Audio player, video player, recorder, clock, alarm, FM radio, calculator, Internet connectivity
SAR	0,682 W/kg

Storing and charging the battery

Insert the battery. Battery contacts must touch the contacts in your phone. Close the battery cover and make sure it is snapped all around. Turn off the phone and unplug the charger to remove the battery. Use only batteries and chargers that are approved for use with this model. When the battery is fully discharged, the indicator might display after a few minutes.

First steps

myPhone 6310 supports DualSIM technology. Insert a SIM card and battery and turn on your phone. The SIM card should be placed with its gold contacts facing down in a way that the recess is stamped.

First use of a new SIM card

Enter 4-digit PIN code and confirm. Be aware that the PIN is the 4 digit number, and you have only 3 attempts to input it correctly. After the third incorrect entry

the SIM card might be unlocked only via entering the PUK code. The terms PIN and PUK pertain to the documentation received from your mobile operator.

Call

Use the numeric keypad to enter the desired phone number (remember to include regional codes for specific countries and cities) and confirm. You can also call numbers stored in your contacts.

Notice

Emergency calls (like 112 in Europe) can be made without a SIM card or without any credits on a SIM card.

Functions during a call:

During a call, the phone supports various features such as hands free (speakerphone).

Energy saving

To conserve battery power, when you are not using the device, dim the display

by pressing the red handset key/power key.

Messages

The phone can receive and send messages. The new, received message is indicated on the phone display on top of the screen.

Contacts

The phone has contacts directory in which you can store names and phone numbers. It is recommended to set numbers with international call prefixes (eg. +48 for Poland, +49 for Germany etc.).

In the directory, you can search for contacts already saved on the phone or on the SIM card, you can also delete, edit, copy, send SMS or call the contact.

Profiles

The phone has various preset profiles that determine the phone ringer volume,

ring type and extra functions in certain situations.

To select a desired profile go to:

Menu → User Profiles or press navigation button **<Right>** on the main desktop.

To edit or activate the selected profile go to:

Menu → User Profiles → eg. Meeting → Options → Activate/Options

Language

English is preset as a default language of the phone. If by any chance you have a phone with a language that you do not understand, go to the major desktop and follow these steps:

press upper left key (Left Functional Key) → 1x navigation key down → 1x navigation key right → 2x confirm navigation key (OK) → 1x navigation key down → 2x confirm navigation key (OK) and there you can select English or any other desired language.

FM radio

To listen to the radio with this device you need to connect it to a headphones, so they can operate as an antenna.

1. Power on / off the radio: the radio will automatically turn on after entering the [FM radio] in the menu.

To turn off the radio, press the right functional key (Exit).

2. Using radio: when the radio is on, use the navigation keys up / down to change the frequency or left / right to change channel. To change volume use * and # keys. For other options, select the Options menu by pressing the left functional key.

3. The radio will automatically switch off when a call is coming, after the end of the conversation the radio turns itself on again.

Notice:

The quality of listening to the radio depends on the quality of radio waves in

the area. The radio may not be fully functional in places when the radio waves may be obstructed, eg. within buildings.

Calculator

Your phone also has a basic calculator that can add, subtract, multiply and divide. To enter Calculator app go to Menu → Organizer → Calculator.

1. If number "0" is displayed on the screen you can enter the number that you want to count.
2. Select the desired operation (+, -, x, /) by using the navigation keys up, down, left or right.
3. Enter the second number.
4. To view the result press (OK).

Notice: The decimal point is entered by pressing * and the negative is added by pressing # key.

LED Flashlight

The phone also has an LED Flashlight located on the upper side of the phone. The flashlight can be turned on / off with an app located in the:

Menu → Organizer → Torch.

Remember to turn off the flashlight when the phone is not being used. By doing so, you will prevent the unnecessary draining of the battery. What is more, draining battery is not considered as a justified complaint, thus can not be taken as a phone defect.

Bluetooth

Menu → Connectivity → Bluetooth

The phone has Bluetooth technology. Bluetooth range is 10 m at most, and is dependent on various conditions (obstacles, electromagnetic interference, etc.). Remember that if Bluetooth is activated your phone uses more power, thus the battery life will be lower.

In the Bluetooth menu:

- Bluetooth – On / Off – Bluetooth functionality can be turned on or off, it will result in showing/hiding the Bluetooth icon on the upper part of the screen.
- Bluetooth visibility – here you can set the visibility of your phone to other devices.
- Paired device – you can search for new devices that are within range, or if you already have a paired device, you can see a list here. From this list, you can select the wished device and then connect to it, or rename / delete / erase the entire list, or view the list of available services.
 - Add new device – the phone will search for all available Bluetooth audio devices in its range – subsequently discovered devices appears on the display – then it is possible to connect to a found device.

Be aware that some devices may have a different procedure for Bluetooth connection, and you need to follow the instructions presented of the device. Most commonly, during the first time of pairing the code is presented on the device and it needs to be rewritten on your phone (the code may vary according to the equipment and can be found in the documentation of the device). After that, the connection should occur automatically.

- Transferring files – available after a successful device pairing. Allows you to send files to a paired device.
- Device name – Enter a name under which your phone will be visible to other Bluetooth devices.
- Bluetooth file storage – you can set that the downloaded files will be saved on a memory card.

Internet connectivity

myPhone 6310 allows you to surf on the Internet and use an Internet browser.

To open the browser go to: **[Menu]** → **[Connectivity]** → **[WAP]** and choose a SIM card that will be used to connect to the Internet. Available options should appear:

1. **[Input URL]** – enter a www address that you would like to visit,
2. **[Bookmarks]** – list of your favorite, stored web pages,
3. **[History]** – shows you a list of lastly visited pages,
4. **[Offline pages]** – shows you a list of web pages stored on your device.

Restore factory settings

Menu → Settings → Phone Settings → Restore factory settings.

Some functions can be restored to original factory settings. The default password is: 1122.

Notice

A mobile phone should be handled in such a way as any other electronic device of similar type. Phone and its components should not be in reach of children, or exposed to humid or dusty environments, extreme temperatures, open flames etc. myPhone Sp. z o.o. and no other vendor are not liable for damages caused by breaking procedures, referrals and obligations contained in the manual or usual, common sense when using similar equipment as myPhone. Any interference with the phone by the customer or unauthorized service will void the warranty.

Instruction

The presented phone may differ in some cases from the guidelines which is a result of the different software versions. Because of that, some names of menu items may vary. If the actual status of the phone does not match exactly

the instructions, follow the actual situation in your phone. The most up to date manual with corrected printing errors, mistakes and technical changes can be found in electronic form on <http://www.myphone.pl/>.

SAR certificate information

Your mobile is phone both a radio transmitter and a receiver.


It is designed and manufactured according to the most recent safety standards, so that exposure to radio waves never exceeded the limits set by the Council of the European Union. These limits establish permitted levels of RF energy for the general population and were developed by independent scientific organizations on the basis of detailed scientific studies, including a large safety margin. They have to ensure the safety of all persons, regardless of age and health.

As far as cell phones are concerned, an exposure to radio waves is measured by the SAR value (Specific Absorption Rate).

The SAR limit recommended by the Council of the European Union is 2 W/kg and refers to the average value per 10 grams of tissue.

The highest SAR value for **myPhone 6310** is equal to **0,628 W/kg**.

Environmental protection

 **Notice:** The device is marked with the symbol of crossed-bin, in accordance with European Directive 2012/19/UE on waste electrical and electronic equipment (Waste Electrical and Electronic Equipment – WEEE). Products marked with this symbol after a period of use should not be utilized or disposed of with household waste. You must dispose of electrical and electronic equipment, providing these to the designated point at which such hazardous

wastes are subjected to a process of recycling. Collecting this type of waste in enclosed places and the correct process of recovery help to protect natural resources. Proper recycling of waste electrical and electronic equipment has a positive impact on human health and the environment.

In order to obtain information about where and how to safely dispose of electrical and electronic equipment waste, users should contact the appropriate authority of the local authorities, waste collection point or point of sale where the equipment has been purchased.

CE 0700 DECLARATION OF CONFORMITY

myPhone Sp. z o.o. hereby declares that this product complies with the essential requirements and other relevant provisions of European Directive 1999/5/EC.

Information about this and our other products: <http://www.myphone.pl/en/>

DEKLARACJA ZGODNOŚCI UE
EU DECLARATION OF CONFORMITY

My/We, myPhone Sp. z o. o.
(nazwa importera / importer's name)

ul. Nowogrodzka 31, 00-511 Warszawa
(adres importera / importer's address)

niniejszym deklarujemy, że następujący wyrób:
declare under our responsibility, that the electrical product:

Telefon komórkowy/GSM Mobile phone
(nazwa wyrobu / name)

myPhone 6310
(typ wyrobu / type of model)

jest zgodny z postanowieniami następujących dyrektyw:
following the provisions following directives:

Dyrektywa 1999/5/EC
Directive 1999/5/EC


spełnia wymagania następujących norm:
complies with the following standards:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013
EN 50360:2001+A1:2012
EN 62209-1:2006
EN 62209-2:2010
EN 50566:2013/AC:2014
EN 62479:2010
EN 301 489-1 V1.9.2:2011
EN 301 489-7 V1.3.1:2005
EN 301 489-17 V2.2.1:2012
EN 301 511 V12.1.1
EN 300 328 V1.9.1

20-10-2016 Warszawa
(data i miejscowość / date, place)

Przeszarżadu

Sebastian Sawicki


(podpis sygnatariusza)
(signature of the signatory)