

PHONE MANUAL

HAMMER 3+



Lot number: 201703

Thank you for choosing HAMMER 3+ device Please read the Manual carefully.

Hammer 3+ phone is intended for use on the GSM 2G frequencies 850/900/1800/1900 MHz. It has a durable, waterproof and dust-proof casing, a contrasting, colour display, a torch, Bluetooth and support for dual SIM.

Without prior written consent of the manufacturer, no part of this manual may be photocopied, reproduced, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any systems of storing and sharing information.

SAFETY

Read these guidelines carefully. Not following them may be dangerous or illegal.

–DO NOT RISK–

Do not switch on the phone when the use of mobile phones is prohibited or if it might cause interference or danger.

–ROAD SAFETY–

Do not use this device while driving any kind of vehicle.

–INTERFERENCES–

All wireless devices may cause interferences, which could affect the performance of other devices.

–RESTRICTED AREAS–

Switch OFF your telephone in an airplane since it may disturb the operation of other equipment located therein. The telephone may interfere with operation of

the medical equipment in hospitals and health protection entities. Abide by any kinds of prohibitions, regulations and warnings conveyed by the medical staff.

–ALARM CALLS–

Making alarm calls may not be possible in some areas or circumstances It is recommended to find an alternative way to notify emergency services if you are going to undeveloped or remote areas.

–QUALIFIED SERVICE–

Only qualified personnel or an authorized service center may install or repair this product. Repairing by an unauthorized or unqualified service may cause phone damage and warranty loss.

–PETROL STATIONS–

Always turn off the phone while refuelling your car on petrol station and in the proximity of chemicals

–CHILDREN–

This device is not a toy Memory card and SIM card are small enough to be swallowed by a child and cause choking. Keep the device and its accessories out of reach of children.

–PHYSICALLY OR MENTALLY DISABLED PEOPLE–

This device should not be operated by people (including children) with limited physical or mental abilities, as well as by people with no earlier experience in operation of electronic equipment. They may use the device only under supervision of people responsible for their safety.

–WATER AND OTHER LIQUIDS–

The device has resistance certificate IP68. It means that

the device is dust-proof and waterproof when all of the rubber seals are intact and properly put in place, as well as when the cover is properly tightened with screws and the speakers membranes are intact (not contaminated with i.e. metal dust). We also advice not to expose the phone to water or other fluids for no good reason. Water and other fluids do not have a positive effect on phone electronic components. If wet, wipe and dry the device as soon as possible. If the following rules are not obeyed and a case of improper use is observed all the complaints concerning the device not being water- or dust-proof will not be taken into consideration.

–BATTERY AND ACCESSORIES–

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. The battery should be used according to its purpose. Do not destroy, impair or throw the battery into flames - it is dangerous and may cause fire. Worn-out or impaired battery should be placed in a dedicated container. Excessive charging the battery can cause damage. Therefore a single battery charge should not last longer than 12 hours. Installing an incorrect battery type can cause an explosion. Never open the battery. Please dispose of the battery according to the instructions. Disconnect an unused charger from power grid. In case of the charger wire

damage, it should not be repaired but replaced with a new one. Use the original manufacturer's accessories only.



- **HEARING** -

To avoid hearing damage, do not use the device at high volume levels for a long period of time and do not put operating device directly to the ear.



- **EYESIGHT** -

To avoid eyesight damage do not look closely onto the flash light during its work. A strong beam of light may cause permanent eye damage!

Manufactured by:

myPhone Sp. z o. o.
street Nowogrodzka 31
00-511 Warsaw
Poland

Customer service:

myPhone Sp. z o. o.
street Krakowska 119
50-428 Wrocław
Poland

Helpline: (+48 71) 71 77 400

E-mail: pomoc@myphone.pl

Manufactured in China

Website:

<http://www.myphone.pl/produkty/hammer/>

Table of contents

Table of contents	5
Package content.....	8
Technical Specifications	9
1. Appearance of the phone, its functions and buttons.	10
2. Introduction	11

Turning the phone on/off	11
Installation of the SIM card, memory card and battery	11
Charging the battery	12
Battery discharge indicator.....	12
3. Using the basic functions.....	13
Keypad lock.....	13
Phone menu access	13
Customize your phone.....	13
Turning the "meeting" mode on and off.....	13
Sounds and user profiles	14
Call handling functions.....	15
Calling.....	15
Answering	16
Text messages.....	16
Sending a message.....	16
Messages display.....	17
Contacts	17
Adding a new contact	17
Search for a contact.....	17
Deleting contacts	18
4. Advanced phone features.....	19
Calling a contact from the phone book.....	19
Missed calls	19
Speakerphone	19
Speed dial.....	20
Dual SIM.....	20
Connecting your phone to the computer	21
International calls.....	21
Internet connection	21
Launch a WiFi connection	21


Web browser.....	22
Facebook.....	23
5. Other phone features	24
Time and date settings.....	24
Menu language settings.....	24
Display settings	25
Call settings	25
Configuration of the alarm / alarms.....	25
Use of calculator.....	26
Factory settings	27
Torch.....	27
Call history.....	27
Audio player	28
FM Radio.....	29
Calendar	30
Bluetooth	30
Pairing bluetooth devices.....	31
Sending files via Bluetooth.....	31
Camcorder	32
Taking pictures.....	32
Recording videos.....	32
Phone icons	33
Troubleshooting	33
6. Proper phone maintenance.....	34
Proper use of the battery	34
Device maintenance	35
Safety information	36
Road safety	36
Surroundings security	36
Technological criteria.....	37
Information on certificates (SAR)	37


Correct disposal of electrical and electronic equipment.....	38
Correct disposal of used batteries.....	39
Declaration of conformity with European Union Directives.....	39

Package content

Before you start using your phone, make sure all of the following items are included in the box:


- HAMMER 3+ phone
- battery,
- charger (adapter + USB cable),
- user manual,
- warranty card.
- Tool for opening the battery cover

 *If any of the above items is missing or damaged, please contact your dealer. There is a sticker containing the IMEI and serial number on the packaging of Hammer 3+ set.*


 *It is recommended to keep the packaging in case of any complaint. Keep the container out of reach of children.*


Technical Specifications


- Display: TFT 2,4" 320x240 px
- GSM Connectivity 2G: 850/900/1800/1900 MHz
- GSM Connectivity 3G: 900/1900 MHz
- Battery: 2000 mAh Li-ion
- Camera: 2 Mpx
- Bluetooth 2.0, Wi-Fi, Dual SIM, FM radio
- MicroUSB
- IP 68 water and dust resistance
- Dimensions: 133,5 x 58 x 18 mm
- Weight (battery included): 160 g

 *The newest version of the manual can be found on our company website:*

<http://www.myphone.pl/produkty/hammer/>

 *Depending on the installed version of the software, service provider, SIM card or country some of the descriptions in this manual may not match your phone.*

 *Depending on the country, service provider, SIM card or device version, the phone and its accessories may differ from the illustrations included in manual.*

 *The descriptions contained in this manual are based on the default settings of the phone.*

1. Appearance of the phone, its functions and buttons.



- 1. Display
- 2. Audio connector (under a rubber plug)
- 3. Speaker
- 4. LED flashlight
- 5. Camera lens
- 6. Torch On / Off.
- 7. Volume control buttons <+>, <->

- 8. Bolts securing casing
- 9. <menu> button
- 10. <contacts> button
- 11. <green headset> button
- 12. <red handset> button

13. Navigation buttons
<up>, <down>, <left>,
<right>, and <OK>.

14. Phone keypad

15. <*> button

16. Microphone

17. <#>

button switching
sound profiles

18. Rear speaker (buzzer)

19. MicroUSB socket
(under a rubber plug).



Service hole. Do not insert any objects inside. Damage will result in the loss of warranty.

2. Introduction

Turning the phone on/off


Attention: *Do not switch the phone on in places which are prohibited from using cell phones, or when it may cause interference or danger.*

To turn the phone on/off press and hold the <red handset> button. If directly after turning the phone on you will see the code request, (in form of “****”) type the code and press <OK>.

Installation of the SIM card, memory card and battery

If the phone is switched on - switch it off. Take off the back lid of the cover – unscrew the screws fixing the lid by using a flat screwdriver or the tool attached. Insert the SIM card with its gold contacts facing down, the way in which the slot is embossed. Insert the

MicroSD card slot

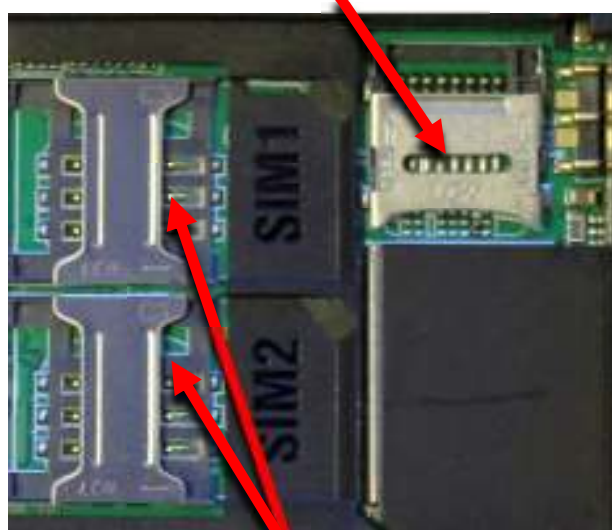


SIM cards slots

memory card with its gold contacts facing down, the way in which the slot is embossed (see the adjacent illustration). The maximum memory card supported capacity is 32 GB. Insert the battery - the battery should be placed in such a way that the gold contacts touch the connector placed to the left from micro SD card (see the illustration above). Replace the battery cover: put it back in place - pay attention to rubber gasket - and tighten the screws.

Charging the battery

To expose the telephone connectors on the side, pry the rubber plug on the phone with your nail. Plug in the microUSB cable to microUSB connector in the phone then connect USB connector to the adapter and to low voltage grid.

 ****Attention:*** *Improper connection of the charger can cause serious damage to the phone. Damages caused by an improper use of the phone are not covered by the warranty.*

While charging, a static icon of battery state located in upper right corner of the screen will become animated. When charging is complete unplug the charger from the power outlet. Unplug the cable from the socket on the phone.

Battery discharge indicator

When the battery gets discharged, a message of the need to charge it will be displayed. Battery icon will be "empty". If the charge level is too low, the phone will

turn off automatically. To use the phone one has to charge the battery.

3. Using the basic functions

Keypad lock

The keypad locks itself automatically after the time set by the user. It can also be locked manually. To do that one has to push and hold the **<*>** button. To unlock the keyboard (when the display is blanked) one should press any key to activate the screen then press **<unlock>** button (located at the bottom left corner of the display), followed by the **<*>** button on the keyboard. The keypad is unlocked.

Phone menu access

To gain access to the phone menu one should press **<Menu>** or **<OK>** button, while on home screen. By pressing navigation buttons **<up>**, **<down>**, **<left>** or **<right>**, move to the wanted menu icon. Press **<OK>** button to confirm your choice (and enter the menu item) or **<Back>** to return to previous menu/desktop.

Customize your phone

HAMMER 3+ phone can be customized to your needs. This makes its use more enjoyable and easier.

Turning the "meeting" mode on and off

To turn off sounds use **<#>** button. Press it and hold for about 3 seconds, until „Meeting mode activated" announcement is displayed. Return to the previous

sound profile by pressing and holding the <#> key again.

Sounds and user profiles

To set ringtones and volume in the phone use [**Profiles**] option To launch it press <OK> button and enter the phone menu. Subsequently, with use of navigation buttons choose [**Profiles**] option and press <OK>. Select the chosen sound profile and enter [**Options**] → [**Activate**] → [**Select**] or <OK> to activate the chosen profile or [**Options**] → [**Customize**] → [**Select**], to edit the profile according to your own preferences. Available sound profile options:

- [**Alert type**] - enter [**Options**] → [**Change**] → and select between Ring only, Vibration only and combination thereof. Then press <OK>.
- [**Ring type**] - enter [**Options**] → [**Change**] → <OK> and select the chosen ringtone type - ascending, repeat, beep once.
- [**SIM 1 Incoming call**] or [**SIM 2 Incoming call**] - option allows you to change incoming call ringtone melody for **SIM 1** or **SIM 2**. -Enter [**Options**] → [**Change**] → <Select>, choose the melody and confirm with <OK> button.
- [**Ringtone volume**] - adjust the volume with <+> and <-> buttons, located at the left side of the phone cover or <to the left> and <to the right>.
- [**SIM 1 message**] or [**SIM 2 message**] - to change the ringtone of incoming SMS for **SIM1** or **SIM2** enter:

[Options] → [Change] → <OK> and select the ringtone.


- [Message volume] - adjust the volume with <+> and <-> buttons, located at the left side of the phone cover or <to the left> and <to the right>.
- [Keypad] enter [Options]→[Change]→<OK> and select using <right> or <left> buttons the sound of the keypad (Silent, tone, click) and press <OK> to confirm.
- [Keypad volume] adjust the volume with <+> and <-> buttons, located at the left side of the phone cover or <to the left> and <to the right>.
- [Power on] - option allows you to set a ringtone for turning on the phone.
- [Power off] - option allows you to set a ringtone for turning off the phone.
- [System alert] - options allows you to turn on or off system sounds of the phone.

Save the changes by selection [Options] →[Save]

Call handling functions

Calling

Enter the number to the main screen using the numeric keypad.

 *We recommend that you enter the area code prior to the telephone number.*

Press <green handset>, to start the call and then select the SIM card which you wish to use. Press <red handset> to finish the call.

Answering

Press <green handset> or [answer] to answer an incoming call. Press <red handset> to reject / finish the call.

Text messages

Sending a message

Enter: [Menu] → [Messages] → [Write message]. Type in the message using the keypad. Sings are typed in letter by letter. <#> button is used to change the input method. The following are possible:

- **ABC** - Only uppercase letters,
- **abc** - Only lower case letters,
- **Abc** - The first letter capital, the rest lower case,
- **Numeric** - numbers only

To enter a special character i.e. period, comma, dash, etc., press <*> and choose from the list, or press the <1> a number of times (in a mode other than "Numeric"). To enter a space between the words press <0> button. To enter the letter "b" one should press <2> button twice. To enter the letter "d" one should press <3> button once etc. When the message is ready one should press [Options] button and choose an option [Send to]. A selection list will appear:

- [Enter recipient] - Enter the number using the numeric keypad and press <OK>.
- [Add from Phonebook] - after choosing that option all you need to do is enter a few first letters of the contact to find it in the contact list.

Select **<OK>** to confirm your choice. After entering the number/choosing a contact enter: **[Options]** → **[Send]**, and select the SIM card using which the message is to be sent.

Messages display

Enter: **[Menu]** → **[Messages]** → **[Inbox]**, choose a message from the list and select **[Options]** → **[View]** → **<Select>** or **<OK>**, to see the message itself.

Contacts

Adding a new contact

To add a contact enter the main phone screen and press **[Names]** button in the bottom right corner of the display, and then choose **[Add new contact]** by pressing **<OK>** button and choose the storage **[to SIM1]**, **[to SIM2]** or **[to Phone]**, then confirm by **<OK>** button. Enter contact details by selecting the name or number using the **<up>** and **<down>** keys. When you have typed-in the number/name press **<OK>** or enter **[Options]** → **[Save]** to save the contact. To move contacts between SIM cards and phone memory enter **[Menu]** → **[Contacts]** → choose a contact you wish to move and subsequently select: **[Options]** → **[Copy]** → **[To phone]** or **[To SIM1]/[To SIM2]** and confirm with **<Select>**.

Search for a contact

To search contacts choose: **[Menu]** → **[Contacts]**. Enter the first letter of the contact. A full list of

contacts starting with given letter will appear on screen. Further letters will narrow down the list of searched contacts. To narrow the search enter consecutive letters. To search for another contact use navigation buttons **<up>** or **<down>**.

After searching the contact and choosing **[Options]** a list of operations will appear:

- **[View]** – to see the details of the contact (name and number).
- **[Send message]** – to send text messages.
- **[Call]** – to call a number from contact.
- **[Edit]** – to edit the contact.
- **[Delete]** – to delete the contact.
- **[Copy]** - to copy a contact between the phone, SIM cards or to file.
- **[Move]** - to move the contact between the phone and SIM card memory
- **[Send business card]** - Send as a business card, SMS, MMS or via Bluetooth.
- **[Add to blacklist]** – to add to phone blacklist.
- **[Groups]** – to join contacts into one group to which you can send messages at once.
- **[Phone book settings]** – to enter additional options menu like: speed dialling, fixed numbers, memory status, etc.

Deleting contacts

To delete all contacts enter:**[Menu]** → **[Contacts]** → **[Options]** → **[Phonebook settings]** → **[Delete all]**

contacts] at this moment you have to insert phone password and then press → **[Ok]**.

To delete a single contact enter: **[Menu]** → **[Contacts]** → search for the contact you wish to erase → **[Options]** → **[Delete]** → **[Yes]**.

4. Advanced phone features

Calling a contact from the phone book

To call a phone number saved in the phone book enter submenu **[Contacts]** In the phonebook search for the proper contact (by entering first letters of the contact using the keypad). Execute the call by pressing the **<Green headset>**.

Missed calls

Missed calls are displayed on the screen of the phone. An appropriate message and an icon on the top of the screen will inform you about a missed call. To check who called, press **[View]**. Another option is **[Calls]** function. To enter this function go to: **[Menu]** → **[Calls]** → **[Call history]** → **[Missed calls]** → **<OK>**. To call back, select the missed call from the list, then press **<green handset>** on the keypad and choose the SIM card with which you wish to make a call.

Speakerphone

During a call press **[OK]**, to activate or deactivate speakerphone mode.

Speed dial

Choose option **[Contacts]** → **[Options]** → **[Phonebook settings]** → **[Speed dial]**. A list of options will appear: **[Status]** - to turn the service on/off, and: **[Set numbers]** - to program speed dialling numbers. Choose option **[Status]**, and press **<OK>** and set **[Status]** to: **[On]**. Choose an option **[Set numbers]**. On the left side of the screen there are digits which correspond with keypad buttons. Select item (from 2 to 9) in which you wish to save a number and, using **[Edit]** option choose an appropriate number from list of contacts. When you set the numbers press **<red handset>**, to return to the main phone screen. To establish connection by speed dialling function press and hold for about 3 seconds the programmed button of phone numerical keyboard and select a SIM card you wish to use.

Dual SIM

Dual SIM function enables using two SIM cards simultaneously. To use that function one should mount two SIM cards in the phone (SIM slots are placed beneath the phone battery). Subsequently enter **[Menu]** → **[Settings]** → **[Dual SIM switch]**. You have the following options to choose from:

- **[Manually selected by user]** - to choose a SIM card you wish to use each time you call / send message etc.

- **[Automatically decided by SIM cards]** so that the calls and SMS messages were sent by the card which was used to call or to which SMS were received.

Connecting your phone to the computer

MyPhone Hammer 3+ can be plugged to the PC computer using USB cable. This allows you to view and exchange data between your computer and your phone, To do this, you must:

- 1) Connect the microUSB connector to USB port in your phone (placed on the bottom of the phone), then connect the USB connector to a USB port on your computer.
- 2) An information about USB connection should be displayed on your phone screen.
- 3) Choose **[Mass storage]** from the displayed list.
- 4) The phone is now connected to the computer. The contents of the phone memory can be viewed using Windows Explorer.

International calls

Starting from the main screen press and hold **<0>** for about 2 seconds until “+” will appear. Enter the full phone number of the recipient (the country code and the telephone number), and then press **<green handset>** to make a call.

Internet connection

Launch a WiFi connection

To use Wi-Fi enter **[Menu]** - **[WLAN]** module will

launch automatically and will search for network access. Choose a network and enter password. If you are able to access a few networks you can enter **[Options]** and set priorities of access. Also in there you can turn off the Wi-Fi module: **[Disconnect]**.


Web browser


To use a web browser you should have Internet connection enabled and enter either **<Down>** button or the **[Menu] → [Services] → [Internet service] → <OK>**. There, you can choose from: Homepage, Bookmarks, Search or input URL, Last web address, Recent pages, Stored pages, Settings. In **[Settings]** you can set a Homepage, Data account (SIM card which you are going to use to connect to the mobile Internet), Browser options (clear cache, clear cookies, clear authentication, Clear URL history), Preferences (timeout, show pictures, cache, cookies), Security settings (trusted certificates), Restore browser settings. You can navigate through the browser screen using the cursor - move it with the **<up>**, **<down>**, **<left>**, **<right>**. Use **<OK>** button to confirm your selection (like the left mouse button on your computer). You can enter website addresses, use the Google search engine that is set as the default home page. Open pages can be set as homepages (startup), added to bookmarks (to be able to return to later), send addresses via SMS, MMS or Bluetooth, save them in memory for offline viewing.

Facebook

To use your Facebook account one has to have an active Internet connection. Enter: **[Menu]** → **[Facebook]** → **<OK>**. On the first run, enter your login and password. You may receive a notification that you need to verify the code that was sent via SMS to the number you provided when setting up your account. If you have not configured an account, select the "**Create new account**". You have to type in your: Name, Surname, Date of birth and press **<OK>** Then choose the gender, then your phone number and a password that will be used to login to the portal and confirm by clicking **[Done]**. An SMS code will be send to the given phone number, with which you have to confirm your indentity. If the phone number you have given is the one at which you configure the Facebook service, you can go out to the main screen using the **<Red handset>** and read the SMS. Then you can safely return to the application - select again from the main screen the **[Menu]** → **[Facebook]** → **<OK>**. Enter the code in marked area and confirm. A message should appear: "Your account has been activated". You can add your picture, give information like place of origin, place of residence, study, work. Then you can begin to search for friends. If you enter log information in to an existing account, your contacts will be downloaded automatically. After basic Facebook configuration a desktop with applications will appear i.e. News, Chat, invitations to become friends, Alerts, Events, Photos, Friends, Profile, Find Friends, Search, Pages, Groups,

Settings, Language. It is possible to use Facebook in almost the same manner as it does on other platforms.

 Remember about the limitations of the phone -the size and resolution of the display, the amount of working memory and the speed of your Internet connection.

 In case of any problems with the application we strongly advice to reset the phone or internet connection and restart the application.

5. Other phone features

Time and date settings

To set time and date enter: [Menu] → [Settings] → [Phone settings] → [Time and date]. Select [Set time/date] confirm with <OK> button and type in the current time using the keypad. Enter the current time and date, and confirm with <OK> or [Enter]. Enter [Menu] → [Settings] → [Phone settings] → [Time and date] → [Set format] to choose a handy format of time and date display.

Menu language settings

To set or change the language of menu enter: [Menu] → [Settings] → [Phone settings] → [Language] and select your preferred language from the list.

Display settings

Enter: [Menu] → [Settings] → [Phone settings] → [Display]:•

- [Wallpapers] → [System] - if you want to choose from system wallpapers or → [User defined] - if you want to add your own wallpaper from microSD memory card and choose any picture from the list. To see a preview of given picture select <OK>. To select the chosen picture as a wallpaper press: [View] → [OK].
- [Screen saver] - Turn the screen saver on or off. You can also choose a picture.
- [Power on display] - one can choose an animation used while turning the phone on.
- [Power off display] - one can choose an animation used while turning the phone off.
- [Show date and time] switches on/off displaying the date and time on the main screen of the phone.

Call settings

Enter [Menu] → [Call] → [Call settings] → [Advanced settings]. There are connection settings available, such as: Blacklist (unwanted numbers) and Whitelist (only those numbers can contact the phone user), automatic redial, call time reminder, automatic quick end, Reject by SMS, Connect notice, Answer mode (Any key, auto answer when headset mode).

Configuration of the alarm / alarms.

From the main menu enter [Organizer]. Select [Alarm], from the list using <up> and <down> button and

confirm your choice by pressing **<OK>** button. Choose any alarm and press **[Edit]** button. You can turn the alarm on/off. To move downwards, press **<down>**. There you can set the alarm time using the phone numerical keypad. Another option enables to set in which days the alarm should be active- **[Repeat]** - available options are: Once, Every day, Custom (chosen days of week). Beneath an option **[Alarm tone]** is situated where you can define alarm ringtone. Beneath that you can see an option **[Alert type]** where you can choose between Ring only, Vib. only and combinations thereof. To confirm alarm settings press **[Done]** and confirm if you wish to save the changes **<Yes>** or **<No>**.

Use of calculator


Enter: **[Menu]** → **[Extra]** → **[Calculator]** and confirm with **<OK>** button. Basic arithmetic operations can be performed using the numeric keypad (typing numbers, digits). Actions can be set using navigation keys **<Up>** - addition, **<Down>** - subtraction, **<Left>** - multiplication and **<Right>** - division. Double press will cause entering memory options (M+ – adding a number to a built-in calculator memory; M- – subtracting the number from the built-in memory of the calculator; MC – clear the calculator memory; MR – Restoring the number from the calculator memory). To see the result press **<OK>**.

Factory settings

To get back to factory settings enter [Menu] → [Settings] → [Restore factory settings], input the phone password and confirm by pressing <OK>. Password required to restore the factory settings is 1122.

Torch

The torch can be switched on by pressing <torch> button on the side of the phone. You can use it any time and while using any phone application.

 **Attention:** *The light emitted by the LED has a strong focus therefore it is inadvisable to look directly into the light. Not following this instruction may cause damage to your eyesight.*

Call history

To view the call history (what calls were made, received, etc.), select [Menu] → [Calls] → [Call History]. The following positions are placed in submenu:

- Missed calls
- Dialed calls
- Received calls
- Delete call logs
- Call timers
- Call cost
- Text msg. counter
- GPRS counter

To enter one of the listed options one has to select it from the list and press <OK>.

Audio player

Audio player is launched by pressing **[Up]** button or: **[Menu] → [Multimedia] → [Audio player]**. This application allows you to play music files in MP3, AAC, AMR, WAV formats. To let the phone add songs to the playlist, they should be saved in the "My Music" folder in the phone's memory. Phone's memory is limited so we recommend using microSD memory card. Songs in there should also be situated in catalogue "My Music". You need to select **[List] → [Options] → [Settings] → [Player Settings] → [Playlist]** and select **<Memory Card>** to enable songs to the audioplayer. Upon exiting back to the player, the songs are automatically added to the playlist.

⚠Attention: Listening to the audio player too long or too loud can cause hearing damage.

To use the audio player use the following buttons:

Button	Function
+ / <#>	Louder
- / <*>	Quieter
<Right>	Next track

<Left>	Previous track
<up>	Start / Pause
<down>	Stop

When the audio player is on, in the bottom left corner an option **[List]** where all available songs will appear. More audio player options can be found in **[List] → [Options] → [Settings]**. Available options:

- **[Player settings]** - you can choose from: Pre. playlist, List auto gen., Repeat, Shuffle, Background play.

- **[Display settings]** - you can change: Skin (appearance of the player), Spectrum Display, Lyrics display (karaoke mode).
- **[Sound effects]** - you can change: Audio effect (Equalizer, Reverb effect, 3D surround, Off), Bass enhancement, Play speed (you can speed up or slow down the playback tracks).

FM Radio

Listening to FM radio requires plugging in headphones with minijack 3,5 mm connector. Headphones are used as an external antenna. Enter **[Menu]** → **[Multimedia]** → **[FM Radio]**. Enter **[Options]** → **[Auto search]** → **<Select>** and confirm "Auto search and save channels". All found radio stations will be saved and available at **[Options]** → **[Channel list]**. Radio volume control is done by **<+>** and **<->** buttons situated at the left side of the phone. Radio control is done using the following buttons:

Button	Function
<down>	Turning the FM Radio On/Off
<up>	Change the <right> and <left> keys purpose. From channel search to frequency change.
<OK>	To turn the recording on/off
<Right>	Change frequency by 0.1 MHz up or search for the next channel up.

<Left>	Change frequency by 0.1 MHz down or search for the previous channel up.
--------	---

Calendar

MyPhone HAMMER 3 is equipped with calendar option. It allows you to preview the current or any date. To enter the calendar, select **[Menu]** → **[Organizer]** → **[Calendar]**. You can add notifications for any day (repeat them everyday, weekly, monthly, yearly, or at any day of the week).

Bluetooth

The phone is equipped with a Bluetooth. It is used to wirelessly connect and exchange files with other devices equipped with Bluetooth. To use Bluetooth enter: **[Menu]** → **[Settings]** → **[Connectivity]** → **[Bluetooth]**. The following options are available:

- **[Power]** – by pressing <OK> the Bluetooth signal is switched on/off. It is signalled with a Bluetooth icon displayed on the upper status bar on the phone main screen.
- **[Visibility]** – Enabling this feature allows the visibility of your phone on the list of available devices other phones, tablets and computers equipped with Bluetooth.
- **[My device]** – an option **[Search new device]** is situated here which allows you to display a list of available Bluetooth devices in range. This feature allows you to connect to a device from the list.

- **[Search audio device]** - this option enables searching and connection the phone to audio devices which are equipped with Bluetooth i.e. Bluetooth headphones.
- **[My name]** - the name visible to other bluetooth devices can be typed in here. Default name is Hammer_3+.
- **[Advanced]** - This option allows you to configure the audio transfer function between the Bluetooth headset and the phone, **[Audio Path]**, select memory to save downloaded Bluetooth files (Phone, memory card, manual selection), set readability or full control over files - **[Permit Access]**, displaying the MAC address of the phone - **[My Address]**.

Pairing bluetooth devices

To connect to a Bluetooth device choose it from a list of available devices by entering: **[Menu]** → **[Settings]** → **[Connectivity]** → **[Bluetooth]** → **[My device]** → **[Search New Device]**. When the device you are searching for is found press **<Cancel>** to stop the search. Subsequently select a device from the list and press **<Pair>** Both devices will display a request for password compliance. Press **[OK]** to pair devices. Insert the password or choose a random list of numbers and insert it on the other device as well. The connection should now be established.

Sending files via Bluetooth.

To send files situated on the memory card to a paired (connected) device enter: **[Menu]** → **[File manager]** →

[**Memory card**] and choose a file you want to send. Then choose [**Options**] → [**Send**] → [**via Bluetooth**] and search the device you wish to send the file to or add it from the list of paired devices. The file will be send after recipient' approval.

Camcorder

HAMMER 3+ is equipped with a camera with the possibility of taking pictures and recording videos.

Taking pictures

To take a photo one should open the camcorder app by entering: [**Menu**] → [**Multimedia**] → [**Camcorder**]. When you start the camera, place the subject you wish to photograph in the frame, and then press <**OK**> to take a photo. Photos will be saved automatically in the phone memory in the "Photos" file. You can change the memory to your microSD card in the camera settings. You can view the pictures you have taken and all other by entering [**Menu**] → [**Multimedia**] → [**Image viewer**].


Recording videos.

To record a video choose [**Menu**] → [**Multimedia**] → [**Camcorder**] → <**down**> which will switch the camcorder into the video mode. Then place the recorded object in the camera frame and press the <**OK**> button to start recording. Videos are saved by default in a "Videos" file on the phone memory. You can change the memory to your microSD card in the camera settings. To watch recorded videos

enter: [Menu] → [Multimedia] → [Video player]. Press <up> to go back to camcorder functions again.

Phone icons

	GSM network range
	Bluetooth ON
	“General” mode on
	“Meeting” mode on
	Missed call

	Battery charge level
	Unread SMS or MMS
	WiFi active
	Plugged-in earphones
	Computer connection

Troubleshooting

Message	Possible solution
Insert SIM card	Make sure SIM card has been correctly installed.
Input PIN	If the SIM card is secured with the PIN code you have to enter the PIN when turning the phone on and press <OK> .
Network error	In areas where signal or reception is weak, calls may not be possible. Also receiving calls may not be possible. Move to another location and try again.
No one can call me	The phone has to be on and withing GSM network reach.

I cannot hear the caller. / The caller cannot hear me.	The mic. should be close to mouth. Check if the built-in mic is not covered. When a headset is in use, check if it has been connected correctly. Check if the built in speaker isn't covered.
Poor sound quality while on the phone	Make sure that the speaker and mic. are not covered.
The connection cannot be established	Check if the typed-in phone number is correct. Check if the phone number entered to the [Phonebook] is correct. Enter the correct phone number if necessary.

6. Proper phone maintenance.

Proper use of the battery

Battery in this device can be powered by a charger. If the battery level is low, recharge it. To prolong battery life, let it discharge before connecting the charger. If not used, unplug the charger from the phone. Excessive charging causes shortened battery life. The temperature of the battery has an impact on its charging cycle. Prior to the charging process, cool the battery or raise its temperature so that it is similar to the room temperature (approx. 20 °C). If the battery

temperature exceeds 40°C the battery must not be charged! Use the battery only according to its intended purpose. Avoid leaving the battery within a magnetic field range, because it shortens its life. Do not use a damaged battery. The battery lifespan can be shortened, if it has been exposed to very low or very high temperatures - this causes interference to the phone, even when the battery has been properly charged. Do not throw the battery into flames! Do not throw a worn-out battery – send it or return it to an authorized recycling point.

Device maintenance

To extend the life of your phone, follow the guidelines. Keep the phone and its accessories out of reach of children. Avoid exposing the phone to the high and low temperatures; it can shorten the life of phone electronic components, melt the plastic parts and destroy the battery. Do not try to disassemble the phone. Tampering with its structure in an unprofessional manner may cause serious damage to the phone or destroy it completely. For cleaning use only a dry cloth. Never use any agent with a high concentration of acids or alkalis . Use only original accessories; violation of this rule may result in invalidation of the warranty. Exposing the phone to extreme temperatures can reduce the level of protection. It is recommended that the phone is not used at temperatures below 0 ° C / 32 ° F or higher than 40 ° C / 104 ° F.

The packaging of the device can be recycled in accordance with local regulations.

Safety information

While using the phone, take into account the legal regulations concerning safety and the safety of its surroundings.

Road safety

Apart from emergency situations, using the phone while driving should be carried out only with use of a headset or a speakerphone, which ensures safety and does not limit motor abilities of the user. If one does not own a headset and still wants to use the phone, one should pull over and stop the car. Pay attention to the legal regulations concerning the use of mobile phone while driving. Some electronic components of the car without adequate protection can be affected by waves emitted by the phone; it is therefore advisable to use the phone in the car only when the external antenna of the vehicle is secured. Use the services of a professional when installing the phone in the car.

Surroundings security

Familiarise yourself with legal regulations concerning the use of mobile phones. Turn off the phone in areas where its use is forbidden or when it may cause interference or danger. The use of any devices that radio waves cause interference with medical devices (i.e. cardiac pacemaker), if they are not properly secured

(if in doubt, consult your doctor or medical device manufacturer).

Attention: In places where there is a risk of explosion (i.e. Petrol stations, chemical factories etc.), it is advisable to turn off the phone. *Please refer to regulations governing the use of GSM equipment in these places.*

Technological criteria

Network: GSM 2G 850/900/1800/1900 MHz and 3G 900/2100 MHz

Some services may depend on your provider, the state of your local cellular network, version of the SIM card used and the way you use your phone. For more information, please contact your service provider.

Attention	Statement
The manufacturer is not responsible for any consequences caused by improper usage of the phone and not obeying the above instructions.	The software version can be upgraded without earlier notice. The representative retains the right to determine the correct interpretation of the above instructions.

Information on certificates (SAR)

Your mobile phone is a transmitter and receiver of radio waves. It is designed and manufactured according to current safety standards, so that exposure to radio

waves never exceeds the limits set by the Council of European Union. Those limits establish the permitted levels of RF energy for the general population and were developed by independent scientific organizations on the basis of detailed scientific studies, including a large safety margin. Their purpose is to ensure the safety of all people, regardless of age and health. With regard to cell phones the level of exposure to radio waves is measured by the value SAR (Specific Absorption Rate). The SAR limit recommended by the Council of the European Union is 2 W / kg and refers to the averaged value for 10 grams of tissue. The highest SAR value for the phone Hammer 3+ equals **1,190 W/kg**.

Correct disposal of electrical and electronic equipment

The device is marked with a crossed-out garbage bin, in accordance with the European Directive 2012/19/EU on used electrical and electronic Equipment (Waste Electrical and Electronic equipment - WEEE). Products marked with this symbol should not be disposed of or dumped with other household waste after a period of use. The user is obliged to get rid of used electrical and electronic equipment by delivering it to designated recycling point in which dangerous waste are being recycled. Collecting this type of waste in designated locations, and the actual process of their recovery contribute to the protection of natural resources. Proper disposal of used electrical and electronic equipment is beneficial to human health and

environment. To obtain information on where and how to dispose of used electrical and electronic equipment in an environmentally friendly manner user should contact their local government office, the waste collection point, or point of sale, where the equipment was purchased.

Correct disposal of used batteries

According to the EU directive 2006/66 / EC on the disposal of batteries, this product is marked with crossed-out garbage bin symbol. The symbol indicates that the batteries used in this product should not be disposed with normal household waste, but treated according to the legal directives and local regulations. It is not allowed to dispose of batteries and accumulators with unsorted municipal waste. Users of batteries and accumulators must use the available collection points of these items, which allows them to return, recycle and disposal. Within the EU, the collection and recycling of batteries and accumulators is a subject to separate procedures. To learn more about existing procedures of recycling of batteries and accumulators please contact your local office or an institution for waste disposal or landfill.

Declaration of conformity with European Union Directives

MyPhone Sp. z o.o. declares that the product complies with all relevant provisions of the European Directive 1999/5/EC.

DEKLARACJA ZGODNOŚCI UE Nr 03/04/2017
EU DECLARATION OF CONFORMITY No 03/04/2017

My/Wi, myPhone Sp. z o. o.
(maker / importer / importer's name)

ul. Nowogrodzka 31, 00-511 Warszawa
(address / importer's address)

niniejszym deklarujemy, że następujący wyrób:
(declare under our responsibility that the electrical product)

Telefon komórkowy/GSM Mobile phone
(name of product / name)

HAMMER3+
(type of model / type of model)

jest zgodny z postanowieniami następujących dyrektyw:
(following the provisions following directives)

Dyrektywa 1999/5/UE
(Directive 1999/5/UE)

spełnia wymagania następujących norm:
(complies with the following standards)

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013
EN 50566:2013/AC:2014
EN 62311:2006
EN 50360:2001+A1:2012
EN 62209-1:2006
EN 62209-2:2010
EN 62479:2010
EN 301 489-1 V1.9.2:2011
EN 301 489-7 V1.3.1:2005
EN 301 489-17 V2.2.1:2012
EN 301 489-24 V1.5.1:2010
EN 301 511 V12.1.1:2015
EN 301 908-1 V7.1.1:2015
EN 301 908-2 V7.1.1:2015
EN 300 328 V1.9.1:2015

(Signature)

(Signature of the signatory)

19-04-2015 Warszawa
(date / company name / date, place)

(Date / signature)
(Signature of the signatory)