

OPERATING INSTRUCTIONS

myPhone HALO MINI



Lot number: 201609

Thank you for choosing the device my-Phone HALO MINI. Please read the Manual carefully.

SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal.

DO NOT RISK

Do not switch on the phone when the use of mobile phones is prohibited or if it might cause interference or danger.

ROAD SAFETY

Do not use the mobile phone while driving a car.

INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.

RESTRICTED AREAS

Switch OFF your telephone in a plane since it may disturb the operation of other equipment located therein. The telephone may interfere with operation of the medical equipment in hospitals and health protection entities. Abide by any kinds of bans, regulations and warnings transferred by the medical staff.

QUALIFIED SERVICE

Only qualified personnel may install or repair this product. Repairing by an unauthorized service may cause a phone damage and warranty loss.

BATTERY AND ACCESSORIES

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal

objects as it may cause partial or complete battery damage. The battery should be used according to its purpose. Disconnect unused charger from mains supply. Excessive charging the battery can cause damage. Therefore, a single battery charge should not last longer than three days. In case of a damage the charger should not be repaired but replaced with a new one. Use only original myPhone accessories available with your phone. Installing an incorrect battery type can cause explosion. Please dispose of battery according to the instructions.

ALARM CALLS

Making alarm calls may not be possible in some areas or circumstances. It is recommended to find an alternative way to notify emergency services if you are going to undeveloped or remote areas.

WATERPROOF

This device is not waterproof. Protect it from moisture.

CHILDREN

The phone is not a toy. Keep the device and its accessories out of reach of children.

USING THE MANUAL

Before you use the device refer to information about safety precautions and instructions for using the phone. The descriptions in this manual are based on the default settings of the phone. The latest version of the user manual can be found on website:

www.myphone.pl.

Depending on the installed version of the software, service providers, SIM card or country, some of the descriptions in this manual may not match your phone.

PETROL STATION SAFETY

Always turn off the phone while refueling your car on petrol station. Do not use your phone close to chemicals.

SOUNDS



To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.

Manufactured by:

myPhone Sp. z o.o.

ul. Nowogrodzka 31

00-511 Warszawa

Polska

Customer service:

myPhone Sp. z o.o.

ul. Krakowska 119

50-428 Wrocław

Polska

phone: (+48 71) 71 77 400

E-mail: pomoc@myphone.pl

website: www.myphone.pl

myPhone HALO MINI contents

Before you start using your phone, make sure all of the following items are included in the box:

- myPhone HALO MINI,
- Li-Ion 800 mAh battery,
- mains charger,
- user manual,
- docking station

If any of the above items is missing or damaged, please contact your dealer.

There is a sticker containing the IMEI and serial number on the packaging of myPhone MINI set.

Therefore it is recommended to keep the packaging in case of any complaint. Keep the container out of reach of children.

Introduction



LP	Description	Function
1	Display	LCD screen
2	Earphone	Phone calls' speaker
3	Loop hole	Used to fasten a lanyard
4	Flashlight	May be turned on/off

		with the Flashlight switch (12)
5	Rear speaker (buzzer)	Rear loudspeaker for speakerphone mode or music playback etc.
6	Camera	The camera lens.
7	SOS button	Long press to activate the emergency call function on a preselected (ICE) phone number.
8	Volume key	Standby: increase and decrease the volume of the speaker or headphones.
9	Fast dial buttons	Press to call a preset number assigned to a particular button.
10	Menu/OK button/Left functional button	Standby: enter the menu. In the menu: confirm the selected function.

11	Contacts/ Back/Right functional button	Standby: enter the Phonebook In the menu: Press to confirm the function indicated on the display in the bottom right corner of the screen above the key. If the function is not stated, go to the previous menu
12	Flashlight on/off switch	Switch in its upper position: turn on the LED flashlight. Switch in its lower position: turn off the LED flashlight
13	Green handset button	Press to answer an incoming call. Standby: Press to access the call list.
14	Red handset button	Press to reject an incoming call. Phone turned off:

		<p>press and hold to turn the phone on.</p> <p>Phone turned on: press and hold to turn the phone off.</p> <p>In the menu: Press to return to the Home screen.</p>
15	Lock key	Move the key to lock on/off the keyboard.
16	Up and Down buttons	In the menu: move to the next or previous available menu/option.
17	Keyboard	Alphanumeric keypad.
18	Microphone.	Make sure that the microphone is not obstructed or covered by anything during the call.
19	Micro USB connector	Used to charge and to connect the data cable.

20	Audio connector	Mini jack 3,5mm connector for headphones and hands free.
21	Docking station connector	Used to charge the device battery via a dedicated charging station.

Specifications

Parameters	Description
Network	GSM 900/1800MHz
Dimensions and weight	116×53×11,5 mm; 70 g
LCD	1,77"
Battery	800mAh, Li-Ion
Memory card	Up to 32GB microSD
Camera	VGA – 0,3Mpx
Additional functions	Audio player, video player, sound recorder, clock, alarm, FM radio, calculator,
SAR	0,825 W/kg

Storing and charging the battery

Insert the battery. Battery contacts must touch the contacts in your phone. Close the battery cover and make sure it is

snapped all around. Turn off the phone and unplug the charger to remove the battery. Use only batteries and chargers that are approved for use with this model. When the battery is fully discharged, the indicator might display after a few minutes.

First steps

Insert the SIM card and battery and turn on your phone. The SIM card should be placed with its gold contacts facing down in a way that the recess is stamped

First use of a new SIM card

Enter 4-digit PIN code and confirm.

Be aware that the PIN is the 4 digit number, you have only 3 attempts to input it correctly. After the third incorrect entry the SIM card might be unlocked only via entering the PUK code. The terms PIN and

PUK pertain to the documentation received from your mobile operator.

Call

Use the numeric keypad to enter the desired phone number (remember to include regional codes for specific countries and cities) and confirm. You can also call numbers stored in your contacts.

Notice

Emergency calls (like 112 Europe) can be made without a SIM card or without any credits on a SIM card.

Functions during a call

During a call, the phone supports various features such as hands free (speakerphone).

Energy saving

To conserve battery power, when you are not using the device, dim the display by moving the lock key.

Messages

The phone can receive and send messages. The new, received message is indicated on the phone display on top of the screen.

Contacts

The phone has contacts directory in which you can store names and phone numbers. It is recommended to set numbers with international call prefixes (eg. +48 for Poland, +49 for Germany etc.).

In the directory, you can search for contacts already saved on the phone or on the SIM card, you can also delete, edit, copy, send SMS or call the contact.

Profiles

The phone can have various preset profiles that determine the phone ringer volume, ring type and extra functions in certain situations.

To select a desired profile go to:

[Menu] → [Settings] → [Profiles]

To edit or activate the selected profile go to:

[Menu] → [Settings] → [Profiles] → [Choose a profile] → [Options] → [Select/Customize].

Language

English is preset as a default language of the phone. If by any chance you have a phone with a language that you do not understand, go to the major desktop and follow these steps:

press upper left key (Left Functional Key)
--> 3x navigation key up --> 1x left functional button (OK) --> 1x navigation key down --> 1x left functional button (OK) --> 1x navigation key down --> 1x left functional button (OK) and there you can select English or any other desired language.

FM radio

To listen to the radio with this device you do not need to connect it to the supplied headphones as the antenna for the radio is built in. However to improve the signal reception, connect the headphones to your device.

You can turn on the radio in the **[Menu]** → **[Multimedia]** → **[FM Radio]**.

To find available radio stations, select: **[Options]** → **[Auto search]** → **[Yes]**. All of the found radio stations will be saved in **[Channel list]**.

Notice

The quality of listening to the radio depends on the quality of radio waves in the area. The radio may not be fully functional in places when the radio waves may be obstructed, eg. within buildings.

Calculator

Your phone also has a basic calculator that can add, subtract, multiply and divide.

From **[Menu]** choose **[Organizer]** → **[Calculator]** and press **[OK]** to confirm.

Basic arithmetic operations can be entered with the keypad (like entering numbers). The operator can be inputted with the navigation keys **<Up>**, **<Down>**, **<M1>** and **<M3>**). **By pressing <M2>** you will get the result of your operation.

LED Flashlight

The phone also has an LED Flashlight located on the upper side of the phone. The flashlight can be turned on / off with the switch located on the right side of the phone. Remember to turn off the flashlight when the phone is not being used. By doing so, you will prevent the unnecessary draining of the battery. What is more, draining battery is not considered

as a justified complaint, thus can not be taken as a phone defect.

Bluetooth

[Menu] → [Organizer] → [Bluetooth]

The phone has Bluetooth technology. Bluetooth range is 10 m at most, and is dependent on various conditions (obstacles, electromagnetic interference, etc.). Remember that if Bluetooth is activated your phone uses more power, thus the battery life will be lower.

In the Bluetooth menu:

- **[Power]** – you can activate or deactivate the bluetooth module by choosing **<On>** or **<Off>**.
- **[Visibility]** – this option makes the phone visible to other devices, such as cellphones, tablets and computers using the Bluetooth module.
- **[My device] – [Search new device]** option is available here, allowing you to display a list of available Bluetooth

devices within range. This function allows you to connect to other devices.

- **[Search audio device]** – this option allows you to find and connect your phone to audio devices using Bluetooth connectivity, such as wireless Bluetooth headsets.
- **[My name]** – allows you to enter a name under which the phone will be displayed in other Bluetooth devices. The default name is “myPhone_HALO_MINI”.
- **[Advanced]** – this option allows you to configure the voice sending feature (speaker, handsfree system or headphones), used storage memory (phone, memory card or question before each try of using files via Bluetooth) and to display the Bluetooth address.

Restore factory settings

In order to restore factory settings, choose **[Menu]** → **[Settings]** → **[Restore settings]** → **<OK>**, enter the password and confirm the selection by pressing **<OK>**. The password used to restore the factory settings is: **1122**.

Notice

A mobile phone should be handled in such a way as any other electronic device of similar type. Phone and its components should not be in reach of children, or exposed to humid or dusty environments, extreme temperatures, open flames etc. myPhone Sp. z o.o. and no other vendor are not liable for damages caused by breaking procedures, referrals and obligations contained in the manual or usual, common sense when using similar equipment as myPhone. Any interference with the phone by the customer or

unauthorized service will void the warranty.

Instruction

The presented phone may differ in some cases from the guidelines, which is a result of the different software versions. Because of that, some names of menu items may vary. If the actual status of the phone does not match exactly the instructions, follow the actual situation in your phone. The most up to date manual with corrected printing errors, mistakes and technical changes can be found in electronic form on <http://www.myphone.pl/>.

SAR certificate information

Your mobile is phone both a radio transmitter and a receiver.

It is designed and manufactured according to the most recent safety standards, so that exposure to radio waves never exceeded the limits set by the Council of the European Union. These limits estab-

lish permitted levels of RF energy for the general population and were developed by independent scientific organizations on the basis of detailed scientific studies, including a large safety margin. They have to ensure the safety of all persons, regardless of age and health.

As far as cell phones are concerned, an exposure to radio waves is measured by the SAR value (Specific Absorption Rate).

The SAR limit recommended by the Council of the European Union is 2 W/kg and refers to the average value per 10 grams of tissue.

The highest SAR value for myPhone HALO MINI is equal to 0,825 W/kg.

Environmental protection

Notice: The device is marked with the symbol of a crossed-bin, in accordance with European Directive 2012/19/UE on waste electrical and electronic equipment (Waste Electrical and Electronic Equip-

ment – WEEE). Products marked with this symbol after a period of use should not be utilized or disposed of with household waste. You must dispose of electrical and electronic equipment, providing these to the designated point at which such hazardous wastes are subjected to a process of recycling. Collecting this type of waste in enclosed places and the correct process of recovery help to protect natural resources. Proper recycling of waste electrical and electronic equipment has a positive impact on human health and the environment.

In order to obtain information about where and how to safely dispose of electrical and electronic equipment waste, users should contact the appropriate authority of the local authorities, waste collection point or point of sale where the equipment has been purchased.

CE 0700 DECLARATION OF CONFORMITY

myPhone Sp. z o.o. hereby declares that this product complies with the essential requirements and other relevant provisions of European Directive 1999/5/EC.

Information about this and our other products: <http://www.myphone.pl/en/>

DEKLARACJA ZGODNOŚCI UE
EU DECLARATION OF CONFORMITY

My/We, myPhone Sp. z o. o.
(nazwa importera / importer's name)

ul. Nowogrodzka 31, 00-511 Warszawa
(adres importera / importer's address)

niniejszym deklarujemy, że następujący wyrób:
declare under our responsibility, that the electrical product:

Telefon komórkowy/GSM Mobile phone
(nazwa wyrobu / name)

HALO MINI
(typ wyrobu / type of model)

jest zgodny z postanowieniami następujących dyrektyw:
following the provisions following directives:

Dyrektywa 1999/5/EC
Directive 1999/5/EC

spełnia wymagania następujących norm:
complies with the following standards:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013
EN 50332-1:2013
EN 50360:2001+A1:2012
EN 62209-1:2006
EN 62209-2:2010
EN 50566:2013
EN 62479:2010
EN 301 489-1 V1.9.2:2011
EN 301 489-7 V1.3.1:2005
EN 301 489-17 V2.2.1:2012
EN 301 489-34 V1.4.1
EN 301 511 V9.0.2:2003
EN 300 328 V1.8.1:2012

21-09-2016 Warszawa
(data i miejscowość / date, place)

Prezes Zarządu

Sebastian Sawicki

(podpis sygnatariusza)
(signature, of the signatory)