

PHONE MANUAL

HAMMER 4+



Thank you for choosing HAMMER 4+ device Please read the manual carefully. Hammer 4+ phone is intended for use on the GSM 2G frequencies 850/900/1800/1900 MHz and 3G frequencies 900/2100 MHz. It has a durable, waterproof and dust-proof casing, a contrasting, colour display, a torch, Bluetooth and support for dual SIM. Without prior written consent of the manufacturer, no part of this manual may be photocopied, reproduced, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any systems of storing and sharing information.

Safety

Read these guidelines carefully. Not following them may be dangerous or illegal. Depending on the installed version of the software, service provider, SIM card or country, some of the descriptions in this manual may not match your phone, and the phone itself and its accessories might differ from the one included in the illustrations

in this manual.

–DO NOT RISK–

All wireless devices may cause interferences, which could affect the quality of other connections. *Do not switch the device on in places which are prohibited from using cell phones, or when it may cause interferences or other dangers.* Always abide by any kinds of prohibitions, regulations and warnings conveyed by the staff.

–ROAD SAFETY–

Do not use this device while driving any kind of vehicle.

–RESTRICTED AREAS–

Switch OFF your telephone in an airplane since it may disturb the operation of other equipment located therein. The telephone may interfere with operation of the medical equipment in hospitals and health protection entities. Abide by any kinds of prohibitions, regulations and warnings conveyed by the medical staff or warning signs.

–QUALIFIED SERVICE–

Only qualified personnel or an authorized service center may install or repair this product. Repairing by an unauthorized or unqualified service may cause device damage and warranty loss.

–PETROL STATIONS–

Always turn off the phone while refueling your car on petrol station. Do not use your device close to chemicals.

–BATTERY AND ACCESSORIES–

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. The battery should be used according to its purpose. Do not destroy, impair or throw the battery into flames - it might be dangerous and may cause fire. Worn-out or impaired battery should be placed in a dedicated container. Excessive charging the battery can cause damage. Therefore, a single battery charge should not last longer than 1 day. Installing an incorrect battery type can cause an explosion. Never open the battery. Please dispose of battery according to the instructions. Disconnect an unused charger from power grid. In case of the charger wire damage, it should not be repaired but replaced with a new one. Use the original manufacturer's accessories only.

–CHILDREN AND PHYSICALLY OR MENTALLY DISABLED PEOPLE–

This device should not be operated by people (including children) with limited physical or mental abilities, as well as by people with no earlier experience in operation of electronic equipment. They may use the device only under supervision of people responsible for their safety. This device is not a toy. Memory card and SIM card are small enough to be swallowed by a child and cause choking. Keep the device and its accessories out of reach of children.

–WATER AND OTHER LIQUIDS–

The device has resistance certificate IP68. It means that the device is dust-proof and waterproof when all of the rubber seals are intact and properly put in place, as well as when the cover is properly tightened with screws and the speakers membranes are intact (not contaminated with i.e. metal dust). We also advice not to expose the phone to water or other fluids for no good reason. Water and other fluids do not have a positive effect on phone electronic components. If wet, wipe and dry the device as soon as possible. If the following rules are not obeyed and a case of improper use is observed all the complaints concerning the device not being water- or dustproof will not be taken into consideration.

–ALARM CALLS–

Making alarm calls may not be possible in some areas or circumstances. It is

recommended to find an alternative way to notify emergency services if you are going to this type of remote areas.



-EYESIGHT-

To avoid eyesight damage do not look closely onto the torch diode during its work. A strong beam of light may cause permanent eye damage!



-SOUNDS-

To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.

Manufacturer

mPTech Ltd.
Nowogrodzka 31 street
00-511 Warsaw
Poland

Website: www.myphone.pl/qr/hammer-4-plus

Manufactured in China

Table of Contents

Table of Contents	3
Package content	4
Technical Specifications	5
1. Appearance of the phone, its functions and buttons.....	5
2. Introduction.....	7
Turning the phone on/off	7
Installation of the SIM card, memory card and battery	8
Charging the battery.....	8
Battery discharge indicator	8
3. Using the basic functions	8
Keypad lock.....	8
Phone menu access	9
Customize your phone.....	9
Turning the "Meeting" mode on and off	9
Sounds and user profiles	9
Call handling functions	9
Calling	9
Answering	10
Text messages.....	10
Message sending	10
Messages display	10
Phonebook.....	10
Adding a new contact	10
Search for a contact.....	10
Deleting contacts	11
4. Advanced phone features	11
Calling a contact from the phonebook.....	11
Missed calls.....	11
Speakerphone mode	11
Speed dial.....	11
Dual SIM open.....	12
Connecting your phone to the computer	12
International calls.....	12

Internet connection.....	12
Launch a WiFi connection	12
Web browser	12
Facebook	12
E-mail	13
5. Other phone features.....	13
Time and date settings	13
Accidental change of language	13
Displays setting.....	14
Call settings.....	14
Configuration of the alarm / alarms	14
Calculator.....	14
Factory settings	14
Torch	14
Call history	15
Audio Player.....	15
Radio.....	15
Calendar	16
Bluetooth	16
Pairing bluetooth devices.....	16
Sending files via Bluetooth	17
Camera	17
Taking pictures	17
Recording videos	17
Phone icons.....	17
Troubleshooting.....	17
6. Proper phone maintenance.	18
Proper use of the battery.....	18
Device maintenance.....	18
Safety information.....	19
Road safety.....	19
Surroundings security.....	19
Technological criteria	19
Information on certificates (SAR)	19
Correct disposal of electrical and electronic equipment	20
Correct disposal of used batteries.....	20
Declaration of conformity with European Union Directives	20

Package content

Before you start using your phone, make sure all of the following items are included in the box:

- HAMMER 4+ Phone
- battery,
- charger (adapter + USB cable),
- a tool for opening the battery cover,
- user manual

 *If any of the above items is missing or damaged, please contact your dealer. There is a sticker containing the IMEI and serial number on the packaging of Hammer 4+ set.*



It is recommended to keep the packaging in case of any complaint. Keep the container out of reach of children.

Technical Specifications

Two SIM card slots, hands-free mode, torch, FM radio, 2 Mpix camera

Display: 2,8", 240x320 pix

Battery capacity: 2000 mAh

Dimensions: 146 x 66 x 18 mm/ 5.7 x 2.6 x 0.7 in

Weight: 173 g

Memory cards support up to 32 GB

Input/output parameters Chargers: 100-240 V~ 0.2 A, 50/60 Hz

Output parameters Chargers: 5.0 V **===** 1 A

The newest version of the manual can be found on our company website:


www.myphone.pl/qr/hammer-4-plus

Depending on the installed version of the software, service provider, SIM card or country, some of the descriptions in this manual may not match your phone.

Depending on the country, service provider, SIM card or device version, the phone and its accessories may differ from the illustrations included in manual.

The descriptions contained in this manual are based on the default settings of the phone.

1. Appearance of the phone, its functions and buttons

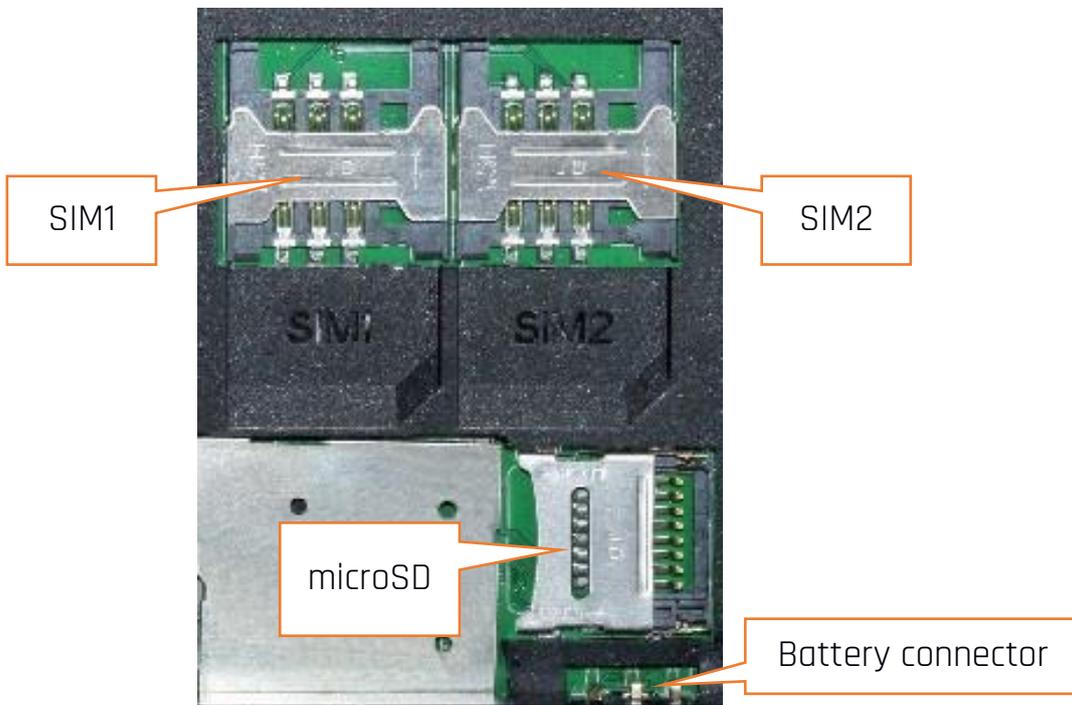

1	Speaker	A speaker used in phone conversations.
2	Camera	Camera lens

3	Headphone port minijack 3.5 mm (under a rubber plug)	It allows you to connect headphones to your phone, so you can listen to the radio (improve the quality of reception - act as an additional antenna), music, and also make calls (when headphones are equipped with a microphone).
4	LEDs	Torch
5	Torch On / Off	Turning the torch (LED diode) on off
6	Volume buttons	Enables adjusting volume of phone tones, audio player and FM radio.
7	Display	LCD display
8	<OK> button <Up> <Down> <Right> <Left>	The <OK> button on the home screen allows you to enter the Menu, where it confirms your selection. The direction keys in the menu allow you to navigate through it. On the home screen it activates: <Up> - audio player, <Down> - camera, <Right> - alarm clock, <Left> - calendar.
9	Screws	Attach the cover under which the battery, SIM cards and memory card are all placed.
10	<Menu> button	While on the main screen enables entering the Menu, and confirms choice while in the Menu. Locks and unlocks the phone keypad.
11	<Contacts> button	On the Mainscreen, launch the Phonebook. While in the menu you can exit or opt out.
12	<Green handset> button	Allows you to receive an incoming call or look through the list of all calls.
13	<Red handset> button	Allows you to reject an incoming call. While in the menu allows you to return to the main screen. While on the mainscreen it allows to turn off the display or turn it off or on again.
14	Phone keypad	Keys enabling dialling the phone number in the home screen, and entering the letters and numbers of the message body in the SMS writing mode.
15	External speaker	Loudspeaker for system sounds, ringtones, music.
16	Microphone	Do not cover it with your hand while on the phone.
17	MicroUSB port (under a rubber plug)	When connected, the charger enables recharging the battery. You can transfer data (photos, videos, music) when you connect it to your computer.
18	<*> button	Use this option to decrease the volume in multimedia applications. When writing an SMS, it displays symbols for insertion into the content.
19	<#> button	Use this option to increase the volume in multimedia applications. Allows you to switch between audio modes and character input modes while writing a text message.

2. Introduction

Turning the phone on/off


Attention: *Do not switch the phone on in places which are prohibited from using cell phones, or when it may cause interference or danger.*

To turn the phone on/off press and hold the <red handset> button. If directly after turning the phone on you will see the code request, (in form of "****") type the code and press <OK>.

Installation of the SIM card, memory card and battery

If the phone is switched on - switch it off. Take off the back lid of the cover - unscrew the screws fixing the lid by using a flat screwdriver or the tool attached. Insert the SIM card with its gold contacts facing down, the way in which the slot is embossed. Insert the memory card with its gold contacts facing down, the way in which the slot is embossed (see the adjacent illustration). The maximum supported capacity of memory card is 32 GB. Insert the battery - the battery should be placed in such a way that the gold contacts touch the connector placed to the left from micro SD card (see the illustration above). Replace the battery cover: put it back in place - pay attention to rubber gasket - and tighten the screws. To remove the batteries, perform these actions in reverse order.

MicroSD memory card slot

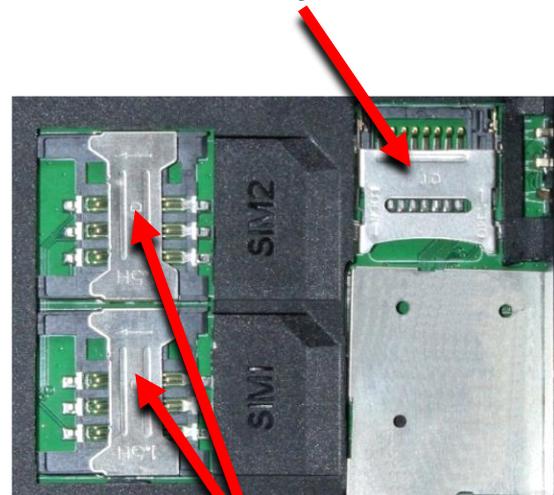

SIM card slots

Charging the battery

To expose the telephone connectors on the side, pry the rubber plug on the phone with your nail. Plug in the microUSB cable to microUSB connector in the phone then connect USB connector to the adapter and to low voltage grid.



***Attention:** Improper connection of the charger can cause serious damage to the phone. Damages caused by an improper use of the phone are not covered by the warranty.

While charging, a static icon of battery state located in upper right corner of the screen will become animated. When the charging is complete unplug the charger from the power outlet. Unplug the cable from the socket on the phone.

Battery discharge indicator

When the battery gets discharged, a message of the need to charge it will be displayed. Battery icon will be "empty". If the charge level is too low, the phone will turn off automatically. To use the phone one has to charge the battery.

3. Using the basic functions

Keypad lock

The keypad locks itself automatically after the time set by the user. It can also be locked manually. To do that one has to push and hold the <*> button. To unlock the keyboard (when the display is blanked) one should press any key to activate the screen then press <unlock> button (located at the bottom left corner of the display), followed by the <*> button on the keyboard. The keypad is unlocked.

Phone menu access

To gain access to the phone menu one should press <Menu> or <OK> button, while on phone display. By pressing navigation buttons <up>, <down>, <left> or <right>, move to the wanted menu icon. Press <OK> button to confirm your choice (and enter the menu item) or <Back> to return to previous menu/desktop.

Customize your phone

HAMMER 4+ phone can be customized to your needs. This makes its use more enjoyable and easier.

Turning the "Meeting" mode on and off

To turn off sounds use <#> button. Press it and hold for about 3 seconds, until „Meeting mode activated" announcement is displayed. By pressing and holding the <#> key again will return to the previous sound profile.

Sounds and user profiles

To set ringtones and volume in the phone use [Profiles] option. To launch it press <OK> button and enter the phone menu. Subsequently, with use of navigation buttons choose [Profiles] option and press <OK>. Select the chosen sound profile and enter [Options] > [Activate] > [Select] or <OK> to activate the chosen profile or [Options] > [Customize] > [Select], to edit the profile according to your own preferences. Available sound profile options:

- [Alert type] - enter [Options] > [Change] > <Select> and select between Ring only, Vibration only and combination thereof.
- [Ring type] - enter [Options] > [Change] > <OK> and select the chosen ringtone type - ascending, repeat, beep once.
- [SIM 1 incoming call] or [SIM 2 incoming call] - option allows you to change incoming call ringtone melody for SIM 1 or SIM 2. -Enter [Options] > [Change] > <Select>, choose the melody and confirm with <OK> button.
- [Ringtone volume] - adjust the volume with <+> and <-> buttons, located at the left side of the phone cover or <to the left> and <to the right>.
- [SIM1 message] or [SIM2 message] - to change the ringtone of incoming SMS for SIM1 or SIM2 enter: [Options] > [Change] > <OK> select the ringtone.
- [Message volume] - adjust the volume with <+> and <-> buttons, located at the left side of the phone cover or <to the left> and <to the right>.
- [Keypad] enter [Options] > [Change] > <OK> and select using <right> or <left> buttons the sound of the keypad (Silent, tone, click) and press <OK> to confirm.
- [Keytone volume] adjust the volume with <+> and <-> buttons, located at the left side of the phone cover or <to the left> and <to the right>.
- [Power on] - option allows you to set a ringtone for turning on the phone.
- [Power off] - option allows you to set a ringtone for turning off the phone.
- [System alert] - allows you to turn on or off system sounds of the phone.

Save the changes by [Options] >[Save].

Call handling functions

Calling

Enter the number using the keypad on the home screen.



We recommend that you enter the area code prior to the telephone number.

Press **<green handset>**, to start the call and then select the SIM card with which you wish to set the conversation. Press **<red handset>** to finish the call.

Answering

Press **<green handset>** or **[answer]** to answer an incoming call. Press **<red handset>** to reject / finish the call.

Text messages

Message sending

Enter: **[Menu] > [Messages] > [Write message]**. Type in the message using the keypad. Signs are typed in letter by letter. **<#>** button is used to change the input method. The following are possible:

- Abc - The first letter capital, the rest lower case.
- abc - Only lower case letters
- ABC - Only uppercase letters,
- 123 - numbers only

To enter a special character i.e. period, comma, dash, etc., press **<*>** and choose from the list, or press the **<1>** a number of times (in a mode other than "Numeric"). To enter a space between the words press **<0>** button. To enter the letter "b" one should press **<2>** button twice. To enter the letter "d" one should press **<3>** button once etc. When typing the message content is done one should press **[Options]** button and choose an option **[Send to]**. A selection list will appear:

- **[Enter recipient]** - Enter the number using the numeric keypad and press **<OK>**.
- **[Add from Contacts]** - after choosing that option all you need to do is enter a few first letters of the contact to find it in the contact list.

Select **<OK>** to confirm the choice. After entering the number/choosing a contact enter: **[Options] > [Send]**, and select the SIM card using which the message is to be sent.

Messages display

Enter: **[Menu] > [Messages] > [Inbox]**, choose a message from the list and select **[Options] > [View] > <Select>** or **<OK>**, to see the message itself.

Phonebook

Adding a new contact

To add a contact enter the main phone screen and press **[Names]** button in the bottom right corner of the display, and then choose **[Add new contact]** by pressing **<OK>** button and choose the storage **[To SIM1]**, **[To SIM2]** or **[To Phone]**, then confirm by **<OK>** button. Enter contact details by selecting the name or number using the **<up>** and **<down>** keys. When you have typed-in the number/name press **<OK>** or enter **[Options] > [Save]** to save the contact. To move contacts between SIM cards and phone memory enter **[Menu] > [Phonebook]** and choose a contact you wish to move. Subsequently select: **[Options] > [Move] > [To phone]**, **[To SIM1]/[To SIM2]** or **[To File]** and confirm with **<Select>**.

Search for a contact

To search contact choose: **[Menu] > [Phonebook]**. Enter the first letter of the contact. A full list of contacts starting with given letter will appear on screen. To narrow down the search enter consecutive letters. To search for another contact use navigation buttons **<up>** or **<down>**.

After searching the contact and choosing **[Options]** a list of operations will appear:

- **[View]** - to see the details of the contact (name and number).
- **[Send message]** - to send text messages.
- **[Call]** - to call a number from contact.
- **[Edit]** - to edit a contact.
- **[Delete]** - to delete a contact.
- **[Copy]** - to copy a contact between the phone, SIM cards or to file.
- **[Move]** - to move the contact between the phone and SIM card memory.
- **[Send business card]** Send as a business card, SMS, MMS, E-mail or via Bluetooth.
- **[Add to blacklist]** - to add to phone blacklist.
- **[Mark several]** - to mark several contacts.
- **[Call groups]** - to send SMS to several contacts at once.
- **[Phonebook settings]** - to enter additional options menu like: speed dialling, fixed numbers, my number, memory status, etc.

Deleting contacts

To delete all contacts enter: **[Menu] > [Phonebook] > [Options] > [Phonebook settings] > [Delete all contacts]** confirm with phone password (1122 - by default) > **<OK>**. To delete a single contact, select: **[Menu] > [Phonebook] >** search for a contact you wish to delete > **[Options] > [Delete] > <Yes>**.

4. Advanced phone features

Calling a contact from the phonebook

To call a phone number saved in the phone book enter submenu **[Names]**. In the phonebook search for the proper contact (by entering first letters of the contact using the keypad). Execute the call by pressing the **<green handset>**.

Missed calls

Missed calls are displayed on the screen of the phone. An appropriate message and an icon on the top of the screen will inform you about a missed call. To check who called, press **[View]**. Another option is **[Calls]** function. To use it enter: **[Menu] > [Calls] > [Call history] > [Missed calls] > <OK>**. To call back, select the missed call from the list, then press **<green handset>** on the keypad and choose the SIM card with which you wish to make a call.

Speakerphone mode

During a call press **[Speaker]**, to activate/deactivate speakerphone mode.

Speed dial

Choose option **[Contacts] > [Options] > [Phonebook settings] > [Speed dial]**. A list of options will appear: **[Status]** - to turn the service on/off, and: **[Set numbers]** - to program speed dialling numbers. Choose option **[Status]**, and press **<OK>** and set **[Status]** to: **[On]**. Choose an option **[Set numbers]**. On the left side of the screen there are digits which correspond with keypad buttons. Select item (from 1 to 9) in which you wish to save a number and, using **[Edit]** option choose an appropriate number from list of contacts. When you set the numbers press **<red handset>**, to return to the main phone screen. To establish connection by speed dialling function press and hold for

about 3 seconds the programmed button of phone numerical keyboard and select a SIM card you wish to use.

Dual SIM open

Dual SIM function enables using 2 SIM cards simultaneously. To use that function one should mount two SIM cards in the phone (SIM slots are placed beneath the phone battery). Subsequently enter **[Menu] > [Settings] > [Dual SIM settings]**. You can choose between **[Dual SIM open]**, **[only SIM1 open]** and **[Only SIM2 open]**.

Connecting your phone to the computer

MyPhone Hammer 4+ can be plugged to the PC computer using USB cable. This allows you to view and exchange data between your computer and your phone. To do this, you must:

- Connect the microUSB connector to USB port in your phone (placed on the bottom of the phone), then connect the USB connector to a USB port on your computer.
- An information about USB connection should be displayed on your phone screen.
- Choose **[Mass storage]** from the displayed list.
- The phone is now connected to the computer. The contents of the phone memory can be viewed using Windows Explorer.

International calls

Starting from the main screen press and hold **<0>** for about 2 seconds until **“+”** will appear. Enter the full phone number of the recipient (the country code and the telephone number), and then press **<green handset>** to make a call.

Internet connection

Launch a WiFi connection

To use Wi-Fi enter **[Menu] > [WLAN]**. Module will launch automatically and will search for Network access. Choose a Network and enter password. When selecting **[Options]**, you can manually define the access point, and also disable Wi-Fi **[Disable WLAN]**.

Web browser

To use the "Opera mini" web browser, you must have an active internet connection and select **[Menu] > [Services] > [Opera mini] > <OK>**. You can choose between a web address, Google Search, and Bookmarks and History. In settings you can set your own graphics loading quality, font size and mobile page view, you can also enable links on the home page, 24-hour clock and delete saved cookies. You can navigate through the browser screen using the cursor - move it with the **<up>**, **<down>**, **<left>**, **<right>**. Use **<OK>** button to confirm your selection (like the left mouse button on your computer). You can add open pages to your bookmarks (so you can go back to them later), send their addresses via e-mail, Twitter and Facebook, save them in your memory for offline browsing.

Facebook

To use your Facebook account one has to have an active Internet connection. Enter:**[Menu] > [Facebook] > <OK>**. On the first run, enter your login and password. You may receive a notification that you need to verify the code that was sent to the SMS number you provided when setting up your account. If you have not configured an account, select the **"Create new account"**. You have to type in your: Name, Surname, Date of birth and press **<OK>** Then choose the gender, then your phone number and

a password that will be used to login to the portal and confirm by clicking [Done]. An SMS code will be send to the given phone number, with which You have to confirm Your indentity. If the phone number you have given is the one at which you configure the Facebook service, you can go out to the main screen using the **<red handset>** and read the SMS. Then you can safely return to the application - select again from the main screen the **[Menu] > [Facebook] > <OK>**. Enter the code in the marked area and confirm. A message should appear: "Your account has been activated". You can add your picture, give information like place of origin, place of residence, study, work. Then you can begin to search for friends. If you enter log information in to an existing account, your contacts will be downloaded automatically. After basic Facebook configuration a desktop with applications will appear i.e. News, Chat, invitations to become friends, Alerts, Events, Photos, Friends, Profile, Find Friends, Search, Pages, Groups, Settings, Language. It is possible to use Facebook in almost the same manner as it does on other platforms.



Remember about the limitations of your phone - screen size and resolution, amount of memory and internet connection speed.



In case of any problems with the application, we advise you to restart your phone or internet connection and reboot the service.

E-mail

To use e-mail, you must have an active Internet connection and select **[Menu] > [Messages] > [Email] > <OK>**. The application will ask you if you want to create a new account. You can choose between several popular services, including Gmail, Yahoo and Hotmail. You can also choose to enter an account from outside the list. After you have entered your: address, password and account name, save the configuration. Then you can proceed with your mail management. You can receive, write, delete, sort and respond to messages.



Remember that in some cases you need to manually set security and authentication settings.



Remember about the limitations of your phone - screen size and resolution, amount of memory and internet connection speed.



In case of any problems with the application, we advise you to restart your phone or internet connection and reboot the service.

5. Other phone features

Time and date settings

To set time and date enter: **[Menu] > [Settings] > [Phone settings] > [Time and date]**. Select **[Set time/date]** confirm with **<OK>** button and type in the current time using the keypad. Enter the current time and date, and confirm with **<OK>** button. Enter **[Menu] > [Settings] > [Phone settings] > [Time and date] > [Set format]** to choose a handy format of time and date display.

Accidental change of language

To set the language of the user, if someone has accidentally selected an unknown user, press the **[Menu] > down > OK > down > OK > down > down > OK**, and then select the desired menu language while the home screen is active.

Displays setting

Enter: [Menu] > [Settings] > [Phone settings] > [Display]:

- [Wallpaper] > [System] if you want to choose from system wallpapers or [User defined] if you want to add your own wallpaper from microSD memory card and choose any picture from the list. To see a preview of given picture select <OK>. To select the chosen picture as a wallpaper press: [View] > [OK].
- [Screen saver] - Turn the screen saver on or off. You can also choose a picture.
- [Power on display] - one can choose an animation used while turning the phone on.
- [Power off display] - one can choose an animation used while turning the phone off.
- [Show date and time] switches on/off displaying the date and time on the main screen of the phone.

Call settings

Enter [Menu] > [Calls] > [Call settings] > [Advanced settings]. There are connection settings available such as Blacklist (unwanted numbers) and Whitelist (only those numbers can contact the phone user), automatic redial, call time reminder, automatic quick end, Reject by SMS, Connect notice, Answer mode (Any key, auto answer when headset mode).

Configuration of the alarm / alarms

From main menu enter [Organizer]. Select [Alarm], from the list using <up> and <down> button and confirm your choice by pressing <OK> button. Choose any alarm and press [Edit] button. You can turn the alarm on/off. To move downwards, press <down>, where you can set the alarm time using the phone numerical keypad. Another option is to set on which days the alarm is to be triggered - function [Repeat], and the possible options are once a day, daily, customized (selected days of the week). Beneath an option [Alarm tone] is situated where you can define alarm ringtone. Below is also [Snooze] option, which allows you to select the length of snooze (the time between alarm activation and re-activation). [Alert type] where you can choose between Ring only, Vib. only and combinations thereof. To confirm alarm settings select [Done] and confirm or discard the changes.

Calculator

Select [Menu] > [Organizer] > [Calculator] and confirm with <OK>. Basic arithmetic operations can be performed using the numeric keypad (typing numbers, digits). Actions can be set using navigation keys <Up> - addition, <Down> - subtraction, <Left> - multiplication and <Right> - division. To see the result press <OK>.

Factory settings

To get back to factory settings enter [Menu] > [Settings] > [Restore factory settings], input the phone password and confirm by pressing <OK>. Password required to restore the factory settings is 1122.

Torch

To turn on the flashlight, press and hold the <Torch> button on the side of the phone. You can use it any time and while using any phone application.

 **Attention:** *The light emitted by the LED has a strong focus therefore it is inadvisable to look directly into the light. Not following this instruction may cause damage to your eyesight.*

Call history

To view the call history (what calls were made, received, etc.), select **[Menu] > [Calls] > [Call History]**. The following positions are placed in submenu:

- Missed calls
- Dialled calls
- Received calls
- Delete call logs
- Call timers
- Text msg. counter
- GPRS counter

To enter one of the listed options one has to select it from the list and press **<OK>**.

Audio Player

Audio player is launched by pressing **[Up]** button or: **[Menu] > [Multimedia] > [Audio player]**. This application allows you to play music files in MP3, AAC, AMR, APE, M4A, WAV formats. To let the phone add songs to the playlist, they should be saved in the "My Music" folder in the phone's memory. Phone's memory is limited so we recommend using microSD memory card. Songs in there should also be situated in catalogue "My Music". If the files have already been saved there, the first time you start the player, it will scan the mentioned folder on the card and add all the songs found in it. Select **[List] > [Options] > [Refresh list]** to play the newly added files on the card.



Listening to the audio player too long or too loud can cause hearing damage.

To enjoy the audio player use the following buttons:

Button	Function
+ / <#>	Louder
- / <*>	Quieter
<Right>	Next track

<Left>	Previous track
<Up> / <OK>	Start/Pause
<down>	Stop

When the audio player is on, in the bottom left corner an option **[Options]** where all available songs will appear. More audio player options can be found in **[Options] > [Channel list] > [Settings]**.

- **[Player settings]** - you can choose from: Pre. playlist, List auto gen., Repeat, Shuffle, Background play.
- **[Display settings]** - you can change: Skin (appearance of the player), Spectrum Display, Lyrics display (karaoke mode).
- **[Sound effects]** - you can change: Audio effect (Equalizer, Reverb, 3D surround, Off), Bass enhancement, Play speed (you can speed up or slow down the playback tracks).

Radio



Listening to FM radio does not require headphones with a 3.5 mm mini-jack plug to be plugged into the headphone jack, but they do help when the reception of the station is weak - they act as an additional antenna.

Enter **[Menu] > [Multimedia] > [FM Radio]**. Enter **[Options] > [Auto search] > <Select>** and confirm "Auto search and save channels". All found radio stations will be saved and available at **[Options] > [Channel list]**. Radio volume controle is done by **<+>** and **<->** buttons situated at the left side of the phone Radio control is done using the following buttons:

Key	Function
<OK>	Turning the FM Radio On/Off
<up>	Change frequency by 0.1 MHz up or search for the next channel up.
<down>	Change frequency by 0.1 MHz down or search for the previous channel up.
<OK>	To turn the recording on/off.
<right>	Searching for stations of a higher frequency.
<left>	Searching for stations on lower frequency.

Calendar

MyPhone HAMMER 4+ is equipped with calendar option. It allows you to preview the current or any date. To enter the calendar, select **[Menu] > [Organizer] > [Calendar]**. You can add notifications and reminders for that day (repeat them every day, every week, month, year, or any day of the week), as well as edit those already inserted.

Bluetooth

The phone is equipped with a Bluetooth. It is used to wirelessly connect and exchange files with other devices equipped with Bluetooth. To use Bluetooth enter: **[Menu] > [Settings] > [Connectivity] > [Bluetooth]**. The following options are available:

- **[Power]** - by pressing <OK> the Bluetooth signal is switched on/off. It is signalled with a Bluetooth icon displayed on the upper status bar on the phone main screen.
- **[Visibility]** - Enabling this feature allows the visibility of your phone on the list of available devices other phones, tablets and computers equipped with Bluetooth.
- **[My device]** - an option **[Search new device]** is situated here which allows you to display a list of available Bluetooth devices in range. This feature allows you to connect to a device from the list.
- **[Search audio device]** - this option enables searching and connection the phone to audio devices which are equipped with Bluetooth i.e. Bluetooth headphones.
- **[My name]** - the name visible to other Bluetooth devices can be typed in here. Default name is **Hammer_4_plus**.
- **[Advanced]** - This option allows you to configure the audio transfer function between the Bluetooth headset and the phone, **[Audio Path]**, select memory to save downloaded Bluetooth files (Phone, memory card, manual selection), set readability or full control over files - **[Permit Access]**, displaying the MAC address of the phone - **[My Address]**.

Pairing bluetooth devices

To connect to a Bluetooth device enter: **[Menu] > [Settings] > [Connectivity] > [Bluetooth] > [My device] > [Search New Device]**. When the device you are searching for is found press <Cancel> to stop the search. Subsequently select a device from the list and press **[Pair]**. Both devices will display a request for password compliance.

Insert the password or choose a random list of numbers and insert it on the other device as well. The connection should now be established.

Sending files via Bluetooth

To send a file from the memory card to a paired (connected) device, select **[Menu] > [File manager] > [Memory card]** > select the file to send and then select **[Options] > [Send] > [Bluetooth]**, and search for the recipient's device or add it from the list of paired devices. The file will be send after recipient' approval.

Camera

HAMMER 4+ is equipped with a camera with the possibility of taking pictures and recording videos.

Taking pictures


To take a picture, start the camera application by pressing **[Down]** or **[Menu] > [Multimedia] > [Camera]** on the main desktop. When you start the camera, place the subject you wish to photograph in the frame, and then press **<OK>** to take a photo. Photos will be saved automatically in the phone memory in the "Photos" file. You can change the memory to your microSD card in the camera settings. You can view the pictures you have taken and all other by entering **[Menu] > [Multimedia] > [Image viewer]**.

Recording videos

To record a video enter **[Menu] > [Multimedia] > [Camera]** or press **<down>** button while on the home screen. Then **<Down>** which will switch the photo camera to video camera mode. Then place the recorded object in the camera frame and press the **<OK>** button to start recording. Videos are saved by default in a "Videos" file on the phone memory. You can change the memory to your microSD card in the camera settings. To watch recorded videos enter: **[Menu] > [Multimedia] > [Video player]**. Press **<up>** to go back to camcorder functions again.

Phone icons

	GSM network range
	Bluetooth ON
	"General" mode on
	"Meeting" mode on
	Missed call

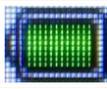	Battery charge level
	Unread SMS or MMS
	WiFi active
	Plugged-in earphones
	Computer connection

Troubleshooting

Message	Possible solution
Insert SIM card	Make sure SIM card has been correctly installed.
Input PIN	If the SIM card is secured with the PIN code you have to enter the PIN when turning the phone on and press <OK> .

Network fail	In areas where signal or reception is weak, calls may not be possible. Also receiving calls may not be possible. Move to another location and try again.
No one can call me	The phone has to be on and within GSM network reach.
I cannot hear the caller./ The caller cannot hear me	The mic. should be close to mouth. Check if the built-in mic. is not covered. When a headset is un use, check if it has been connected correctly. Check if the built-in speaker isn't covered.
Poor sound quality while on the phone.	Make sure that the speaker and mic. are not covered.
The connection cannot be established	Check if the typed-in phone number is correct. Check if the phone number entered to the [Phonebook] is correct. Enter the correct phone number if necessary.

6. Proper phone maintenance.

Proper use of the battery

Battery in this device can be charged with a charger. If the battery level is low, recharge it. To prolong battery life, let it discharge before connecting the charger. If not used, unplug the charger from the phone. Excessive charging causes shortened battery life. The temperature of the battery has an impact on its charging cycle. Prior to the charging process, cool the battery or raise its temperature so that it is similar to the room temperature (approx. 20°C/68°F). If the battery temperature exceeds 40°C the battery must not be charged! Use the battery only according to its intended purpose. Avoid leaving the battery within a magnetic field range, because it shortens its life. Do not use a damaged battery. The battery lifespan can be shortened, if it has been exposed to very low or very high temperatures - this causes interference to the phone, even when the battery has been properly charged. Do not throw the battery into flames! Do not throw a worn-out battery - send it or return it to an authorized recycling point.

Device maintenance

To extend the life of your phone, follow the guidelines. Keep the phone and its accessories out of reach of children. Avoid exposing the phone to the high and low temperatures; it can shorten the life of phone electronic components, melt the plastic parts and destroy the battery. Do not try to disassemble the phone.

Tampering with its structure in an unprofessional manner may cause serious damage to the phone or destroy it completely. For cleaning use only a dry cloth. Never use any agent with a high concentration of acids or alkalis.

Use only original accessories; violation of this rule may result in invalidation of the warranty. Exposing the phone to extreme temperatures can reduce the level of protection. It is recommended that the phone is not used at temperatures below 0°C/32°F or higher than 40°C/104°F.



The packaging of the device can be recycled in accordance with local regulations.

Safety information

While using the phone, take into account the legal regulations concerning safety and the safety of its surroundings.

Road safety

Apart from emergency situations, using the phone while driving should be carried out only with use of a headset or a speaker phone, which ensures safety and does not limit motor abilities of the user. If one does not own a headset and still wants to use the phone, one should pull over and stop the car. Pay attention to the legal regulations concerning the use of mobile phone while driving. Some electronic components of the car without adequate protection can be affected by waves emitted by the phone; it is therefore advisable to use the phone in the car only when the external antenna of the vehicle is secured. Use the services of a professional when installing the phone in the car.

Surroundings security

Familiarise yourself with legal regulations concerning the use of mobile phones. Turn off the phone in areas where its use is forbidden or when it may cause interference or danger. The use of any devices that radio waves causes interference with medical devices (i.e. cardiac pacemaker), if they are not properly secured (if in doubt, consult your doctor or medical device manufacturer).

Attention: In places where there is a risk of explosion (i.e. petrol stations, chemical factories etc.), it is advisable to turn off the phone. *Please refer to regulations governing the use of GSM equipment in these places.*

Technological criteria

Network: GSM 2G 850/900/1800/1900 MHz and 3G 900/2100 MHz

Some services may depend on your provider, the state of your local cellular network, version of the SIM card used and the way you use your phone. For more information, please contact your service provider.

Attention	Statement
The manufacturer is not responsible for any consequences caused by improper usage of the phone and not obeying the above instructions.	The software version can be upgraded without earlier notice. The representative retains the right to determine the correct interpretation of the above instructions.

Information on certificates (SAR)

Your mobile phone is a transmitter and receiver of radio waves. It is designed and manufactured according to current safety standards, so that exposure to radio waves never exceeds the limits set by the Council of European Union. Those limits establish the permitted levels of RF energy for the general population and were developed by independent scientific organizations on the basis of detailed scientific studies, including a large safety margin. Their purpose is to ensure the safety of all people, regardless of age and health. With regard to cell phones the level of exposure to radio waves is measured by the value SAR (Specific Absorption Rate). The SAR limit recommended by the Council of the European Union is 2 W/kg and refers to the averaged value for 10 grams of tissue. The highest SAR value for the phone Hammer 4+ equals 1,847 W/kg.

The maximum radio frequency power emitted in the frequency range.				
Frequency Range	GSM 850/900/1800/1900 MHz	UMTS 900/2100MHz z	WiFi 2412- 2472 MHz	Bluetooth 2402- 2480 MHz
Transmit Power	2W/1W	0.25W	13.87 dBm	6.95 dBm EIRP

Correct disposal of electrical and electronic equipment



The device is marked with a crossed-out garbage bin, in accordance with the European Directive 2012/19/EU on used electrical and electronic Equipment (Waste Electrical and Electronic equipment - WEEE). Products marked with this symbol should not be disposed of or dumped with other household waste after a period of use. The user is obliged to get rid of used electrical and electronic equipment by delivering it to designated recycling point in which dangerous waste are being recycled. Collecting this type of waste in designated locations, and the actual process of their recovery contribute to the protection of natural resources. Proper disposal of used electrical and electronic equipment is beneficial to human health and environment. To obtain information on where and how to dispose of used electrical and electronic equipment in an environmentally friendly manner user should contact their local government office, the waste collection point, or point of sale, where the equipment was purchased.

Correct disposal of used batteries



According to the EU directive 2006/66/EC with changes included in 2013/56/UE directive, on the disposal of batteries, this product is marked with crossed-out garbage bin symbol. The symbol indicates that the batteries used in this product should not be disposed with normal household waste, but treated according to the legal directives and local regulations. It is not allowed to dispose of batteries and accumulators with unsorted municipal waste. Users of batteries and accumulators must use the available collection points of these items, which allows them to return, recycle and disposal. Within the EU, the collection and recycling of batteries and accumulators is a subject to separate procedures. To learn more about existing procedures of recycling of batteries and accumulators please contact your local office or an institution for waste disposal or landfill.

Declaration of conformity with European Union Directives



mPTech Sp. z o.o. hereby declares that the HAMMER 4+ mobile phone complies with the Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following Internet address:

www.myphone.pl/qr/hammer-4-plus